



INSTRUCTION MANUAL 81023


SECONDS


ADJUST,START/STOP
LIGHT

HOW TO CHANGE THE DISPLAY MODE

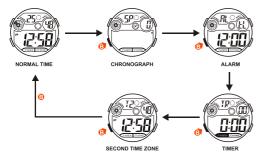

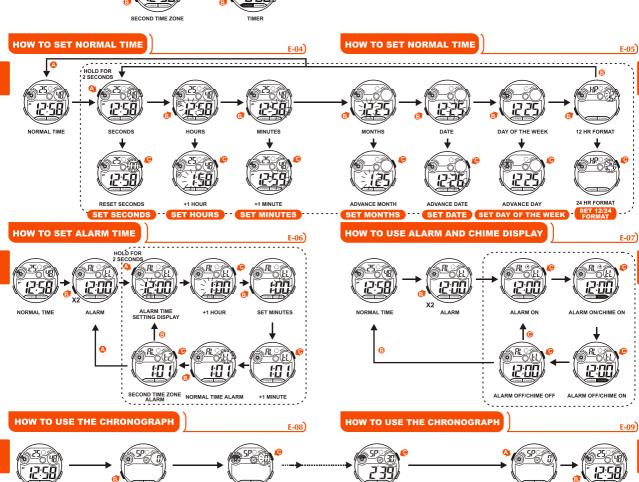

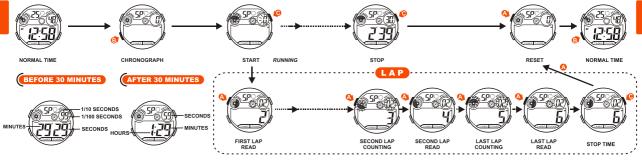


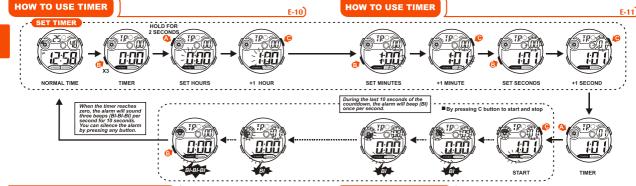

HOW TO SET SECOND TIME ZONE $^{\circ}$

CARE OF YOUR WATCH

HOW TO USE EL LIGHT

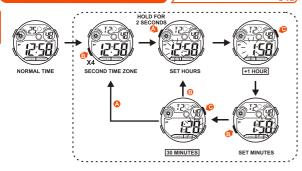

NOTE:

- This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
 - The illumination provided by backlight may hard to see under direct sunlight.

1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.

FEATURES AND SPECIFICATIONS

<u>E-15</u>)

This watch contains precise electronic components. Never attempt to open the case or remove the back cover.

4. Avoid severe impact: The watch is designed to withstand impact under normal

use. Do not subject it to severe impacts or rough usage, and do not drop it onto

- * Month, Date AM/PM and Electro-Luminescent light.
- 2. Do not operate buttons while underwater, or while swimming or diving. 3. Should water or condensation appear in the watch, immediately have the watch
- * Alarm function with buzzer signal output. * Chronograph function with lap opertaion.
- * Hourly chime.
 - * 12/24 hour format switch option. Timer.
 - * Second time zone. 3. Accuracy at normal temperature (25°C): ±30 seconds a month.
- hard surfaces. 5. Avoid exposing the watch to temperature extremes.

checked. Water can corrode electronic parts inside the case.

- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals,
- 7. Keep your watch away from strong electric fields and static electricity.

4. Normal operating temperature range: 10°C ~ 40°C.