



REGULAR DISPLAY AND BUTTON OPERATION

HOURLY CHIME

## IOW TO SET SECOND TIME ZONE

12:58/ NORMAL TIME +1 HOUR 78 128 30 MINUTES CARE OF YOUR WATCH

- This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use. The illumination provided by backlight may hard to see under direct sunlight.
- 1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving. 3. Should water or condensation appear in the watch, immediately have the watch
- checked. Water can corrode electronic parts inside the case 4. Avoid severe impact: The watch is designed to withstand impact under normal
- use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces. 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- 7. Keep your watch away from strong electric fields and static electricity.
- FEATURES AND SPECIFICATIONS 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- 2. Function: \* Month, Date AM/PM and Electro-Luminescent light. \* Alarm function with buzzer signal output.
- \* Hourly chime.
- \* Chronograph function with lap opertaion.
- \* 12/24 hour format switch option. Timer.
- \* Second time zone

NOTE:

- 3. Accuracy at normal temperature (25°C): ±30 seconds a month. 4. Normal operating temperature range: 10°C ~ 40°C.