


## INSTRUCTION MANUAL 82368


### ALARM CHRONOGRAPH MODULE



### MODE TRANSITION DIAGRAM

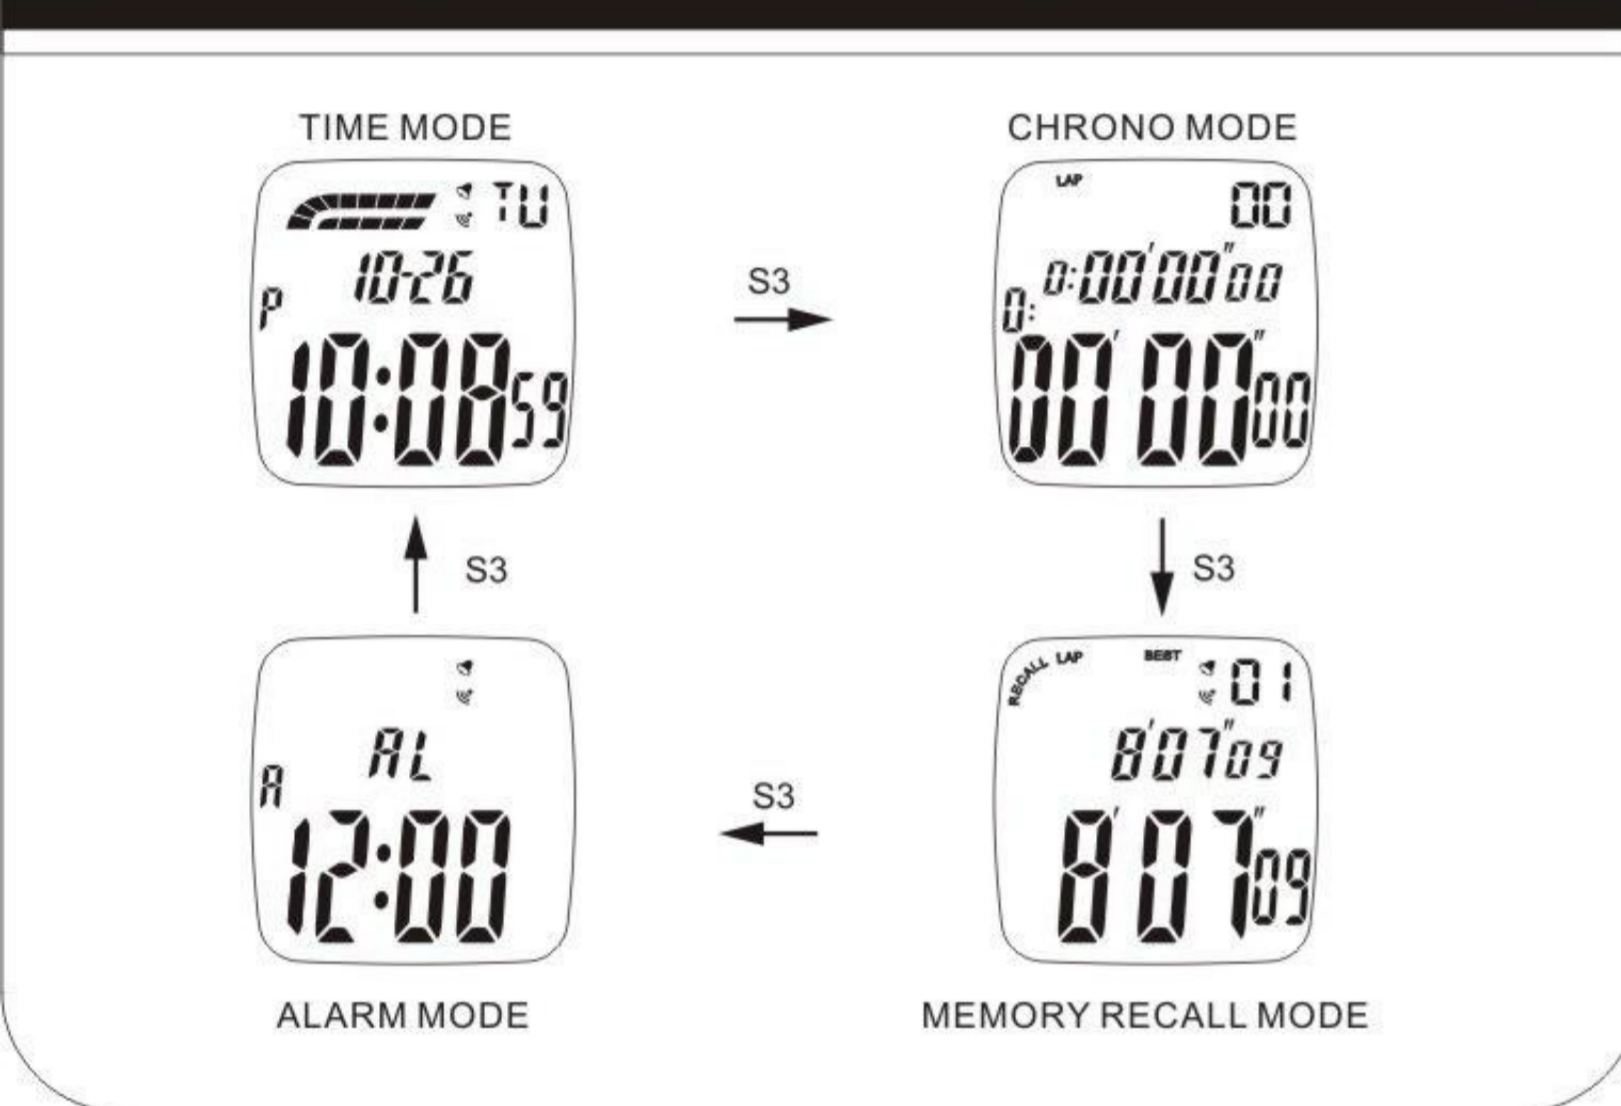


### HOW TO SET NORMAL TIME/CALENDAR

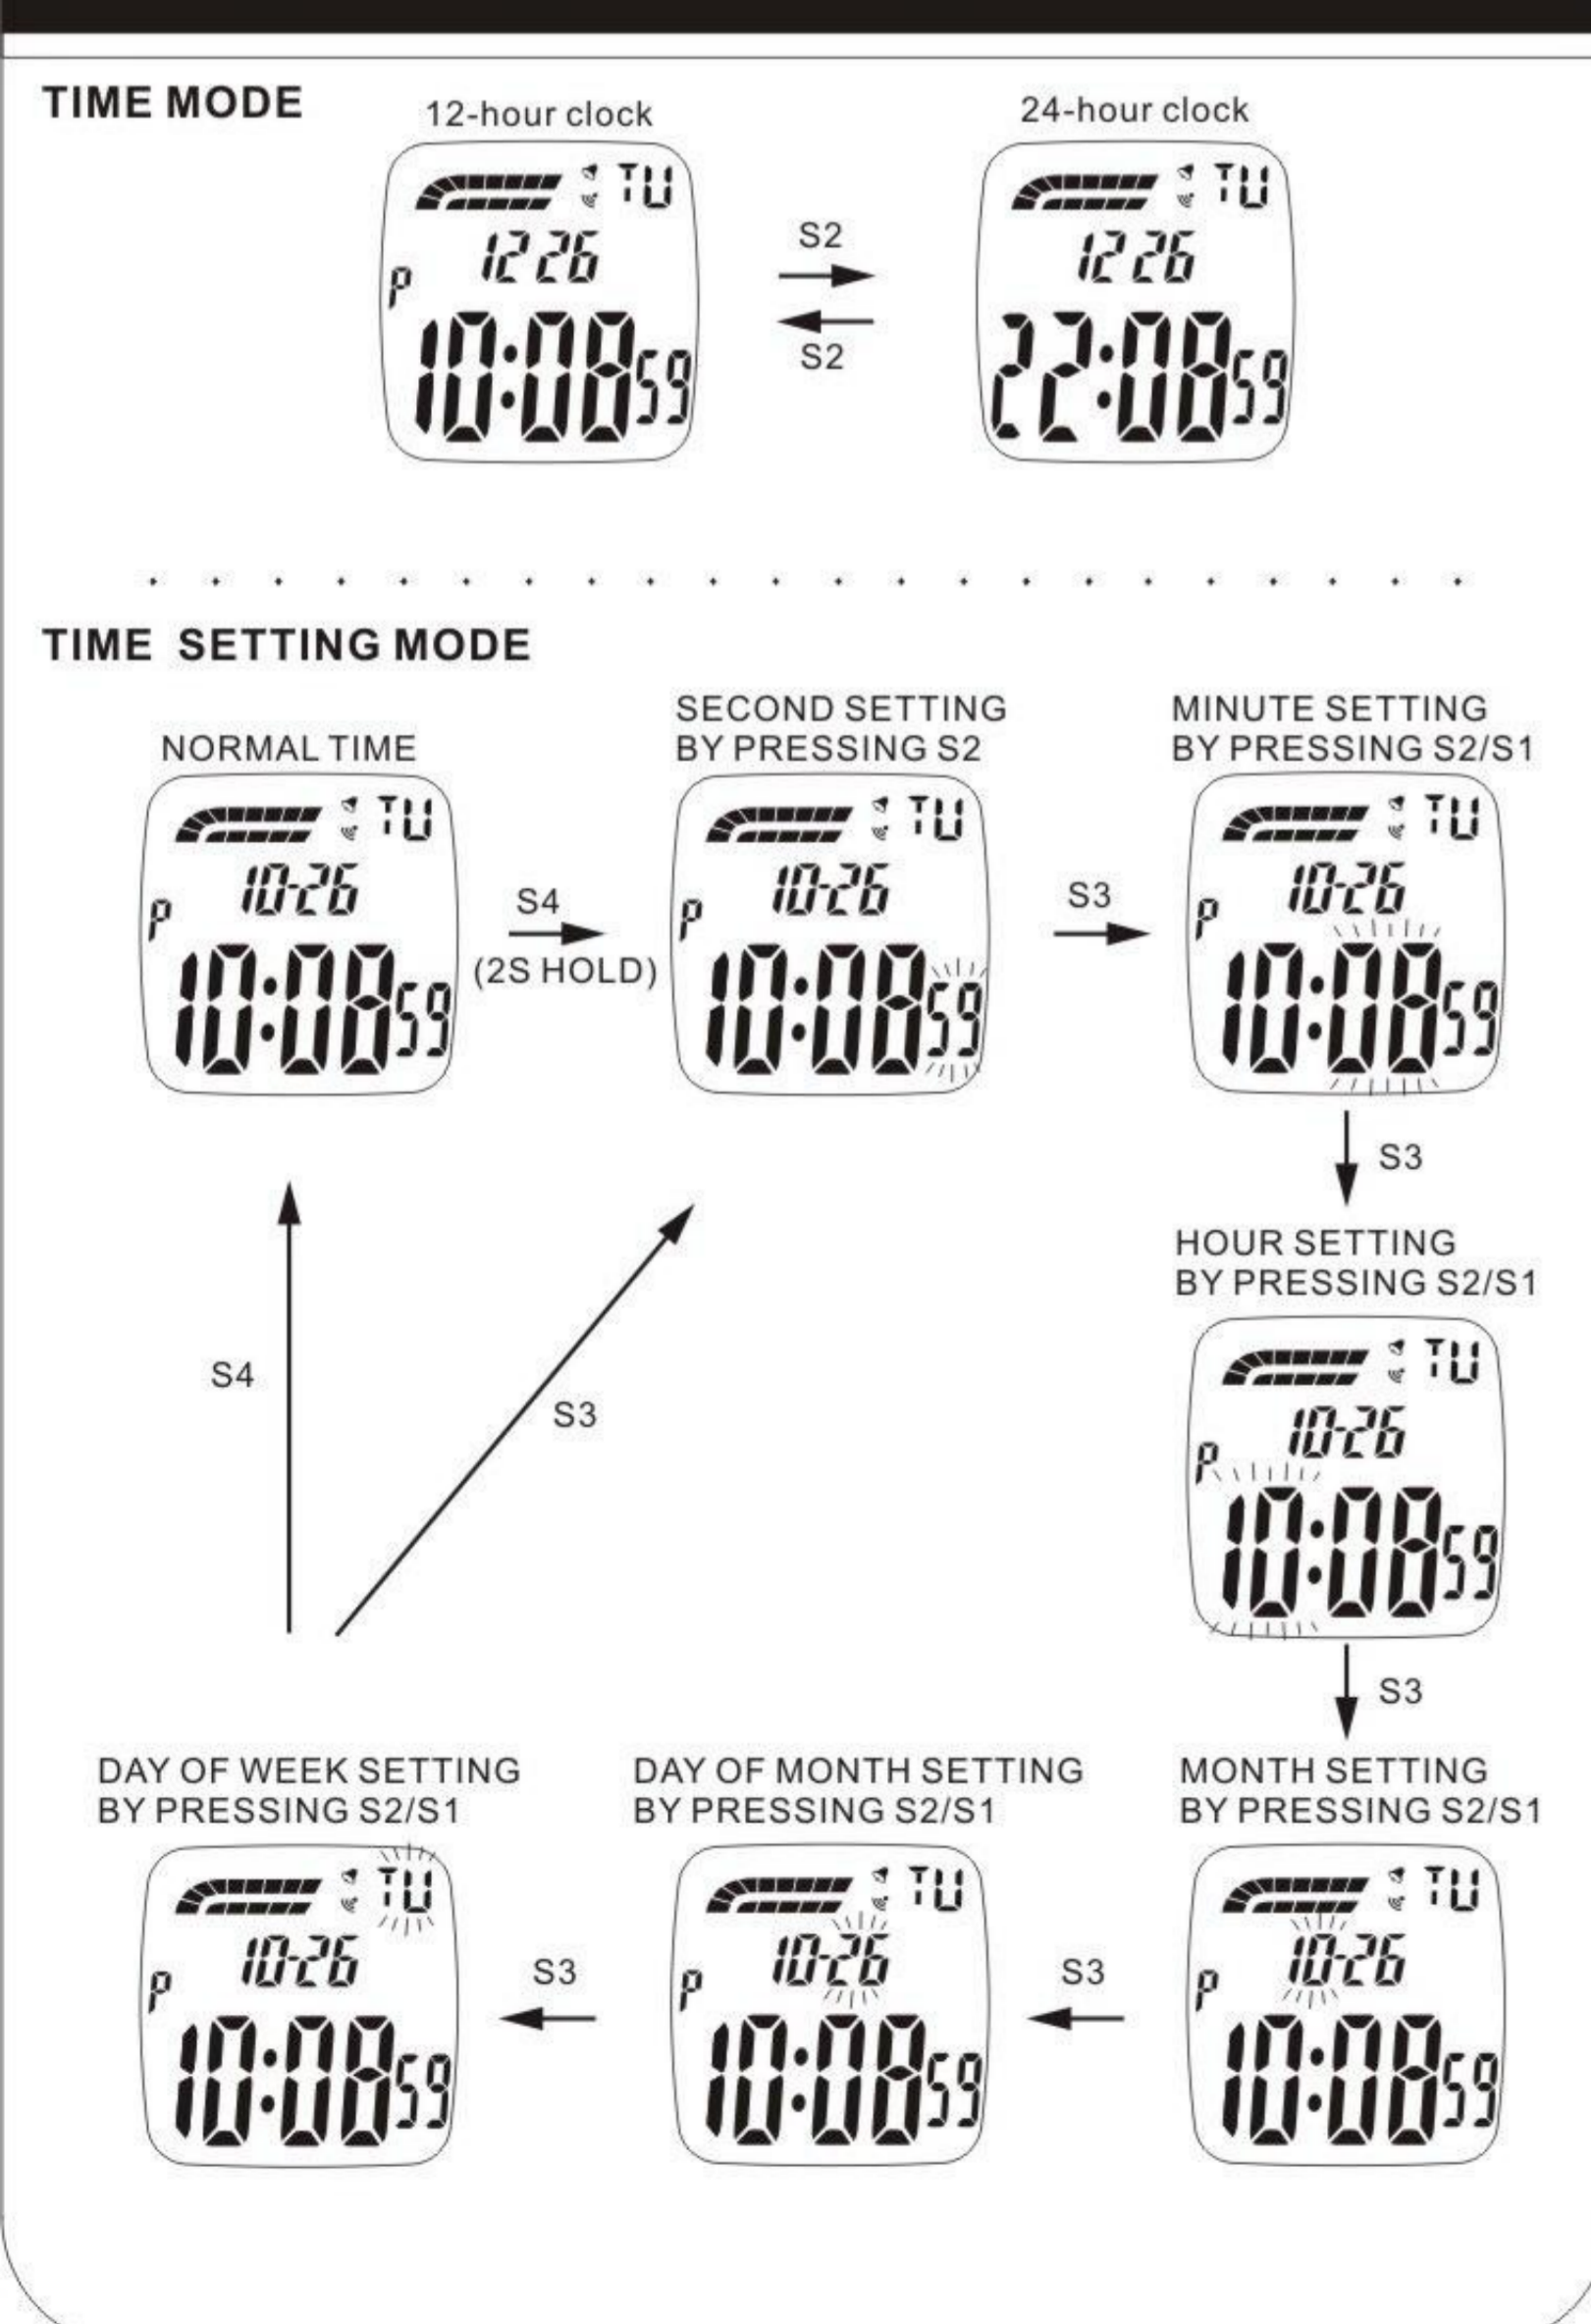

### CARE OF YOUR WATCH

1. This watch contains electronic components. Never attempt to open the case or remove the back cover.
2. Do not operate push buttons below the surface of the water while swimming or diving.
3. Should water or condensation appear in the watch, have the watch checked immediately. Corrosion of electronic parts can occur inside the case.
4. Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
5. Avoid exposing the watch to extreme temperature.
6. Clean the watch with soft cloth and clean water only. Avoid using chemicals. The waterproof gasket will corrode.
7. Keep your watch away from the conditions of strong electric field and static electricity.


### REGULAR DISPLAY AND BUTTON OPERATION

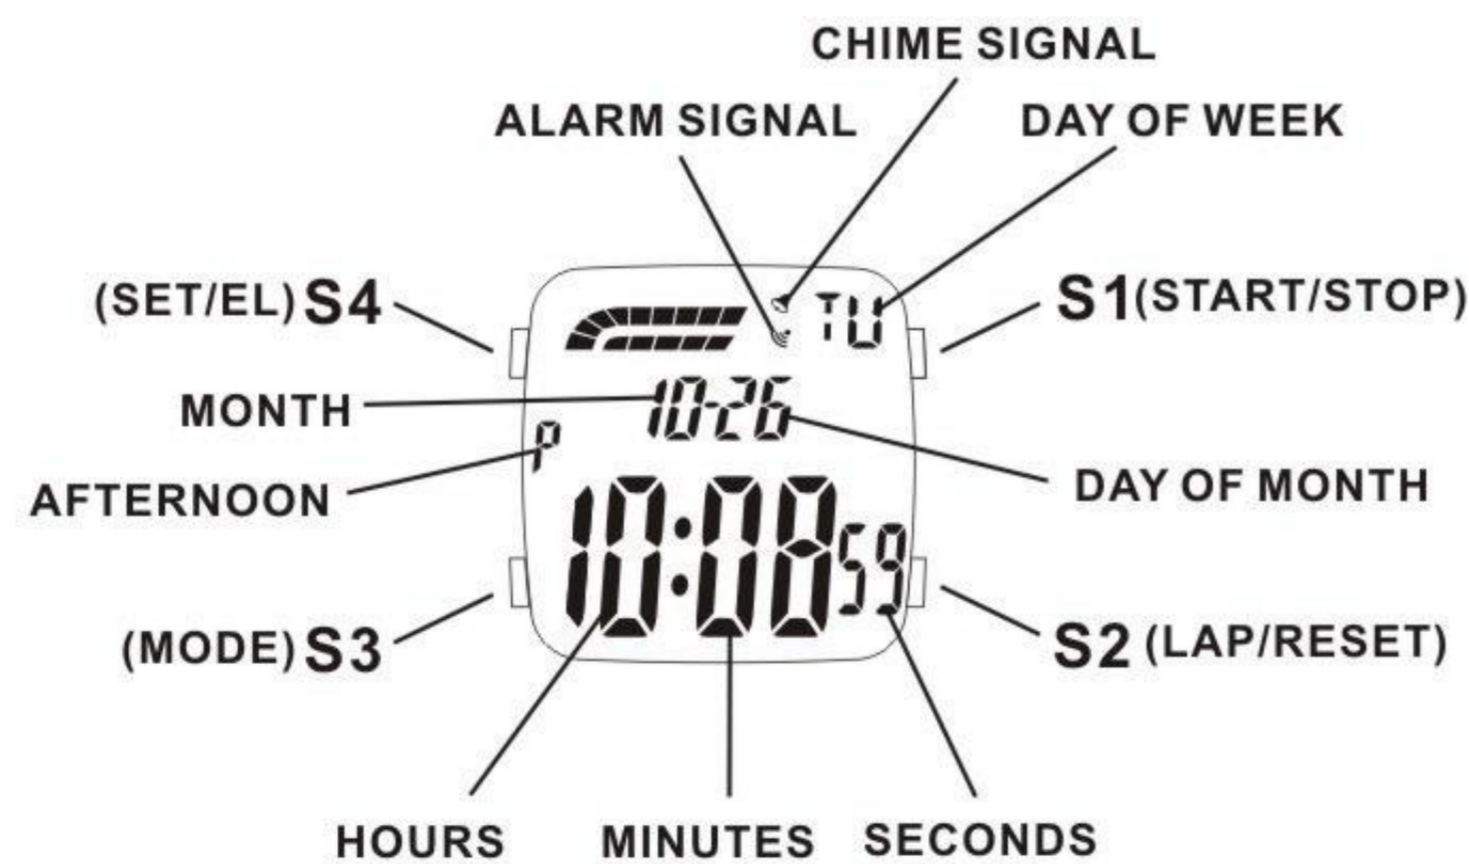


- ▶ EL IS TURN-ON FOR THREE SECONDS WHEN S4 BUTTON IS DEPRESSED
- ▶ SIMULTANEOUSLY PRESSING S1 S2 S3 S4 FOR AT LEAST TWO SECONDS PERFORM A RESET




### ALARM MODE

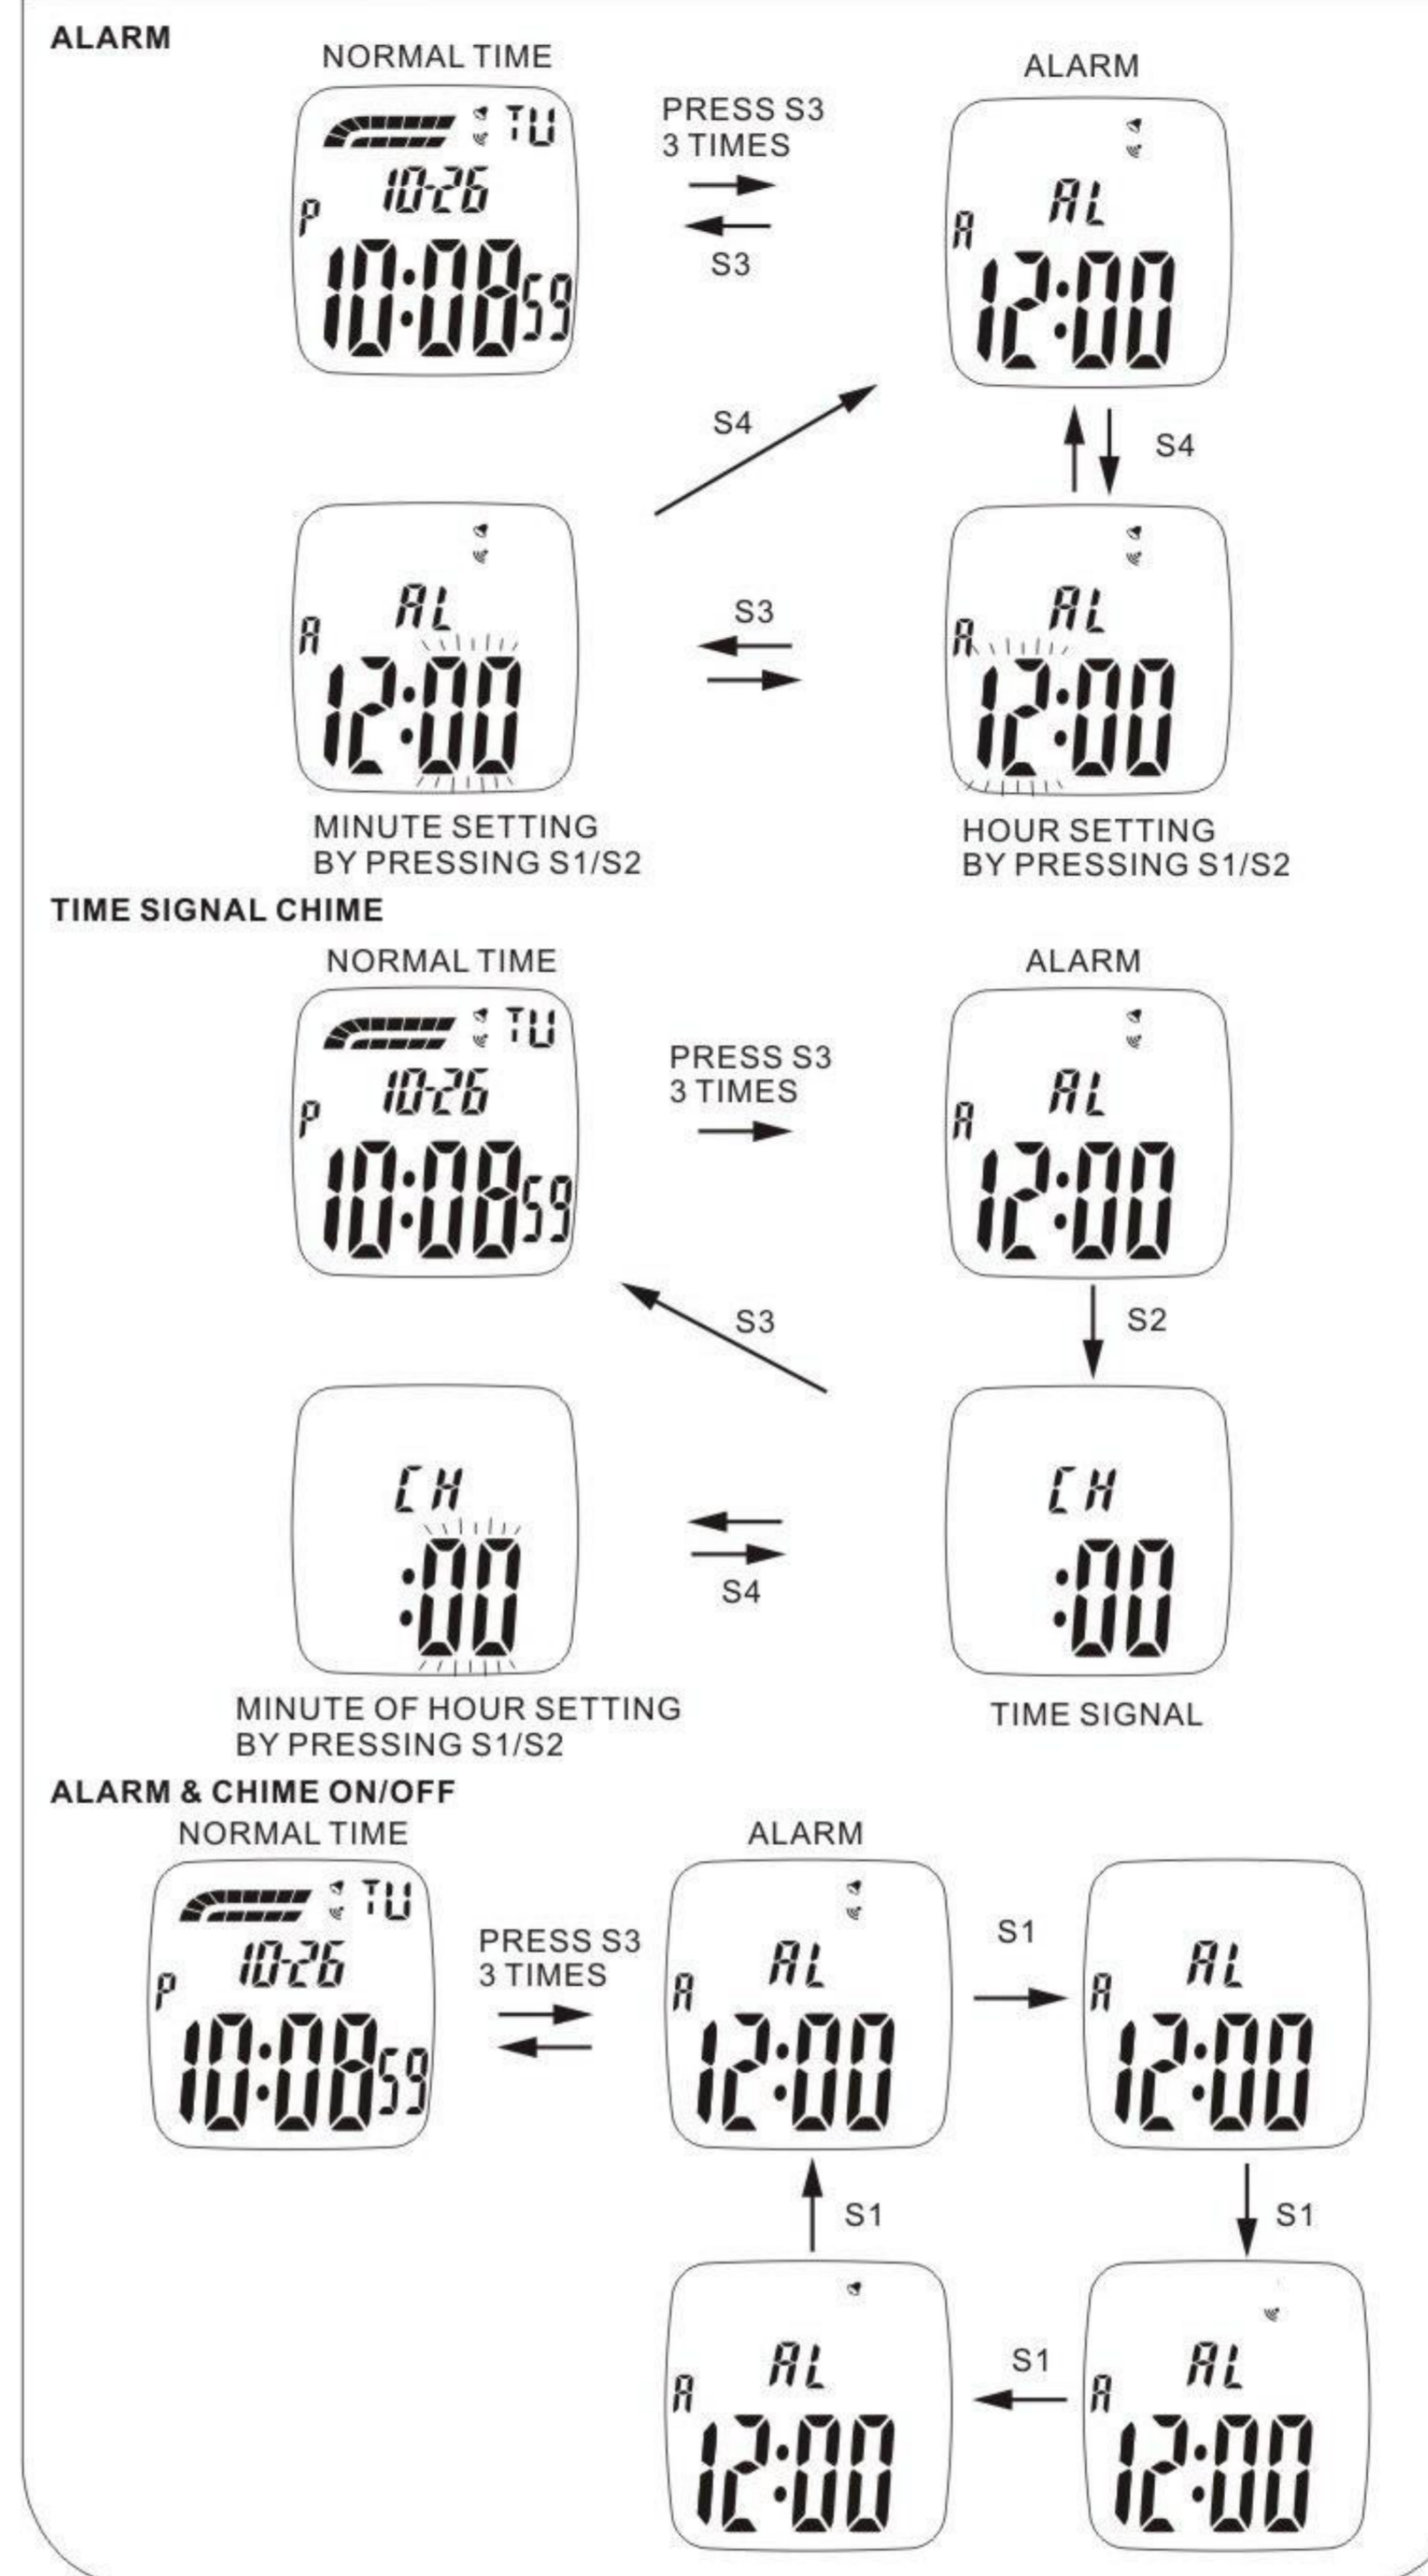

### CHRONO MODE

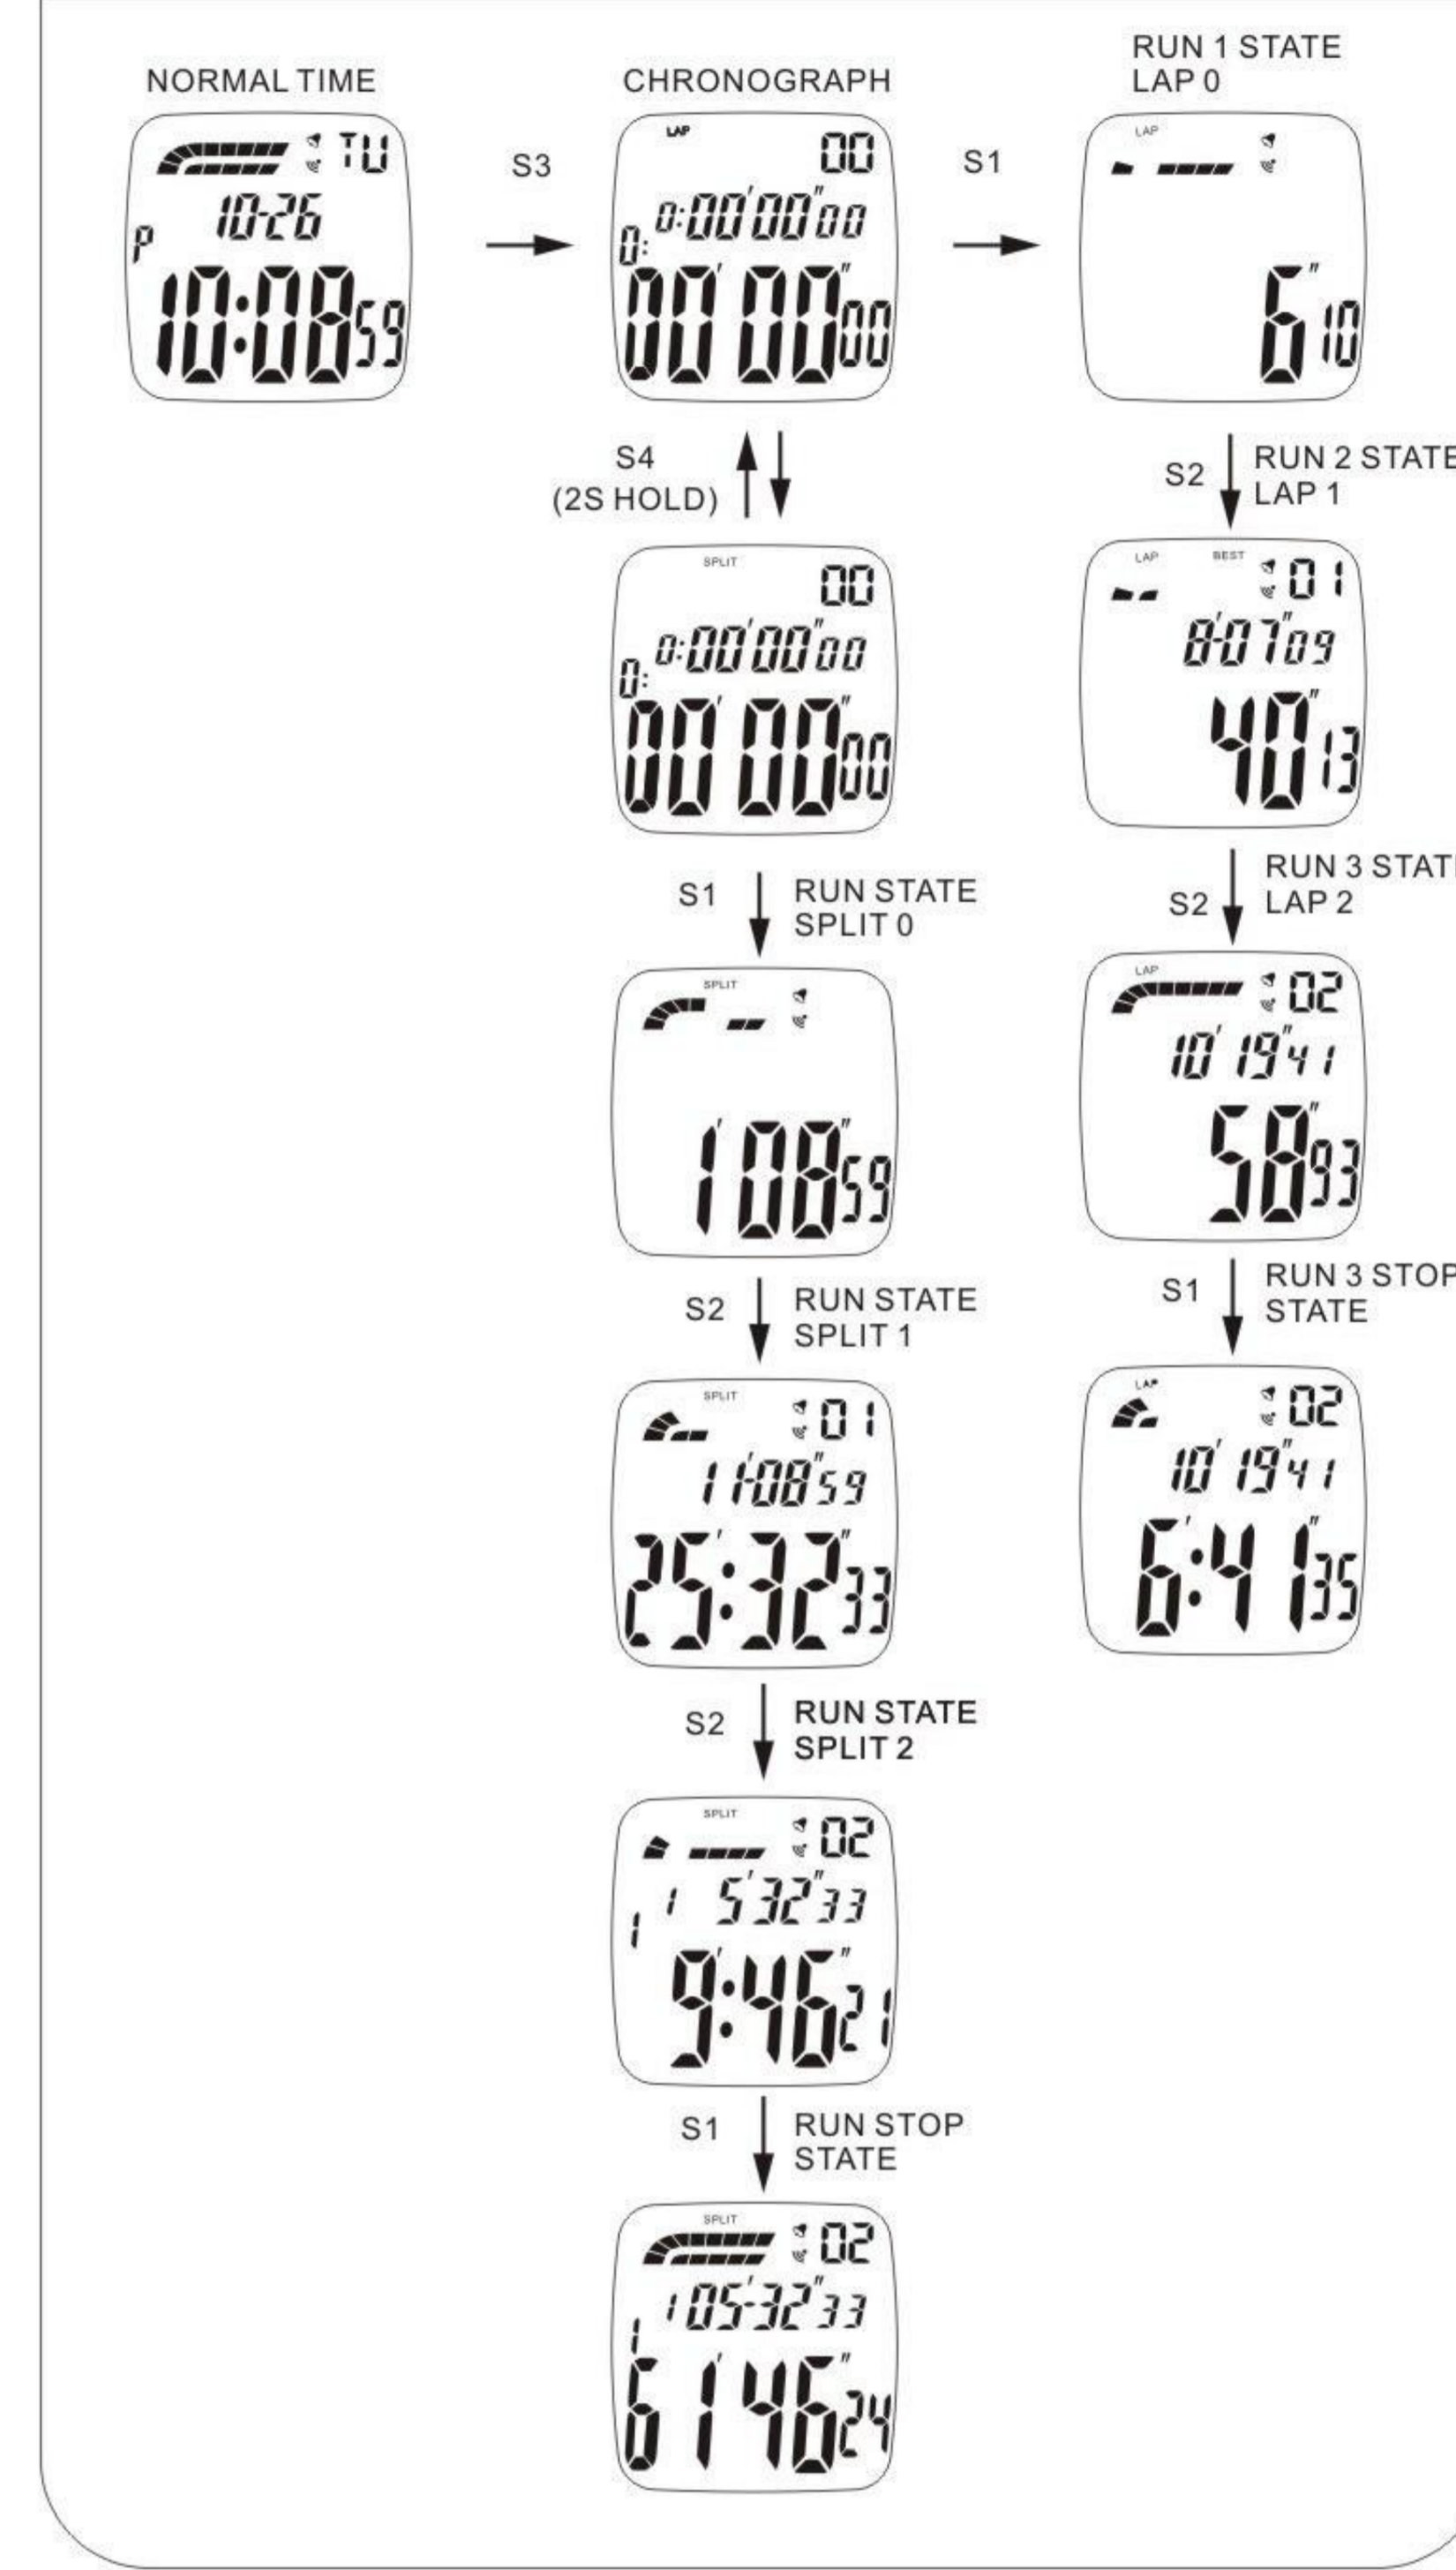

### MEMORY RECALL MODE

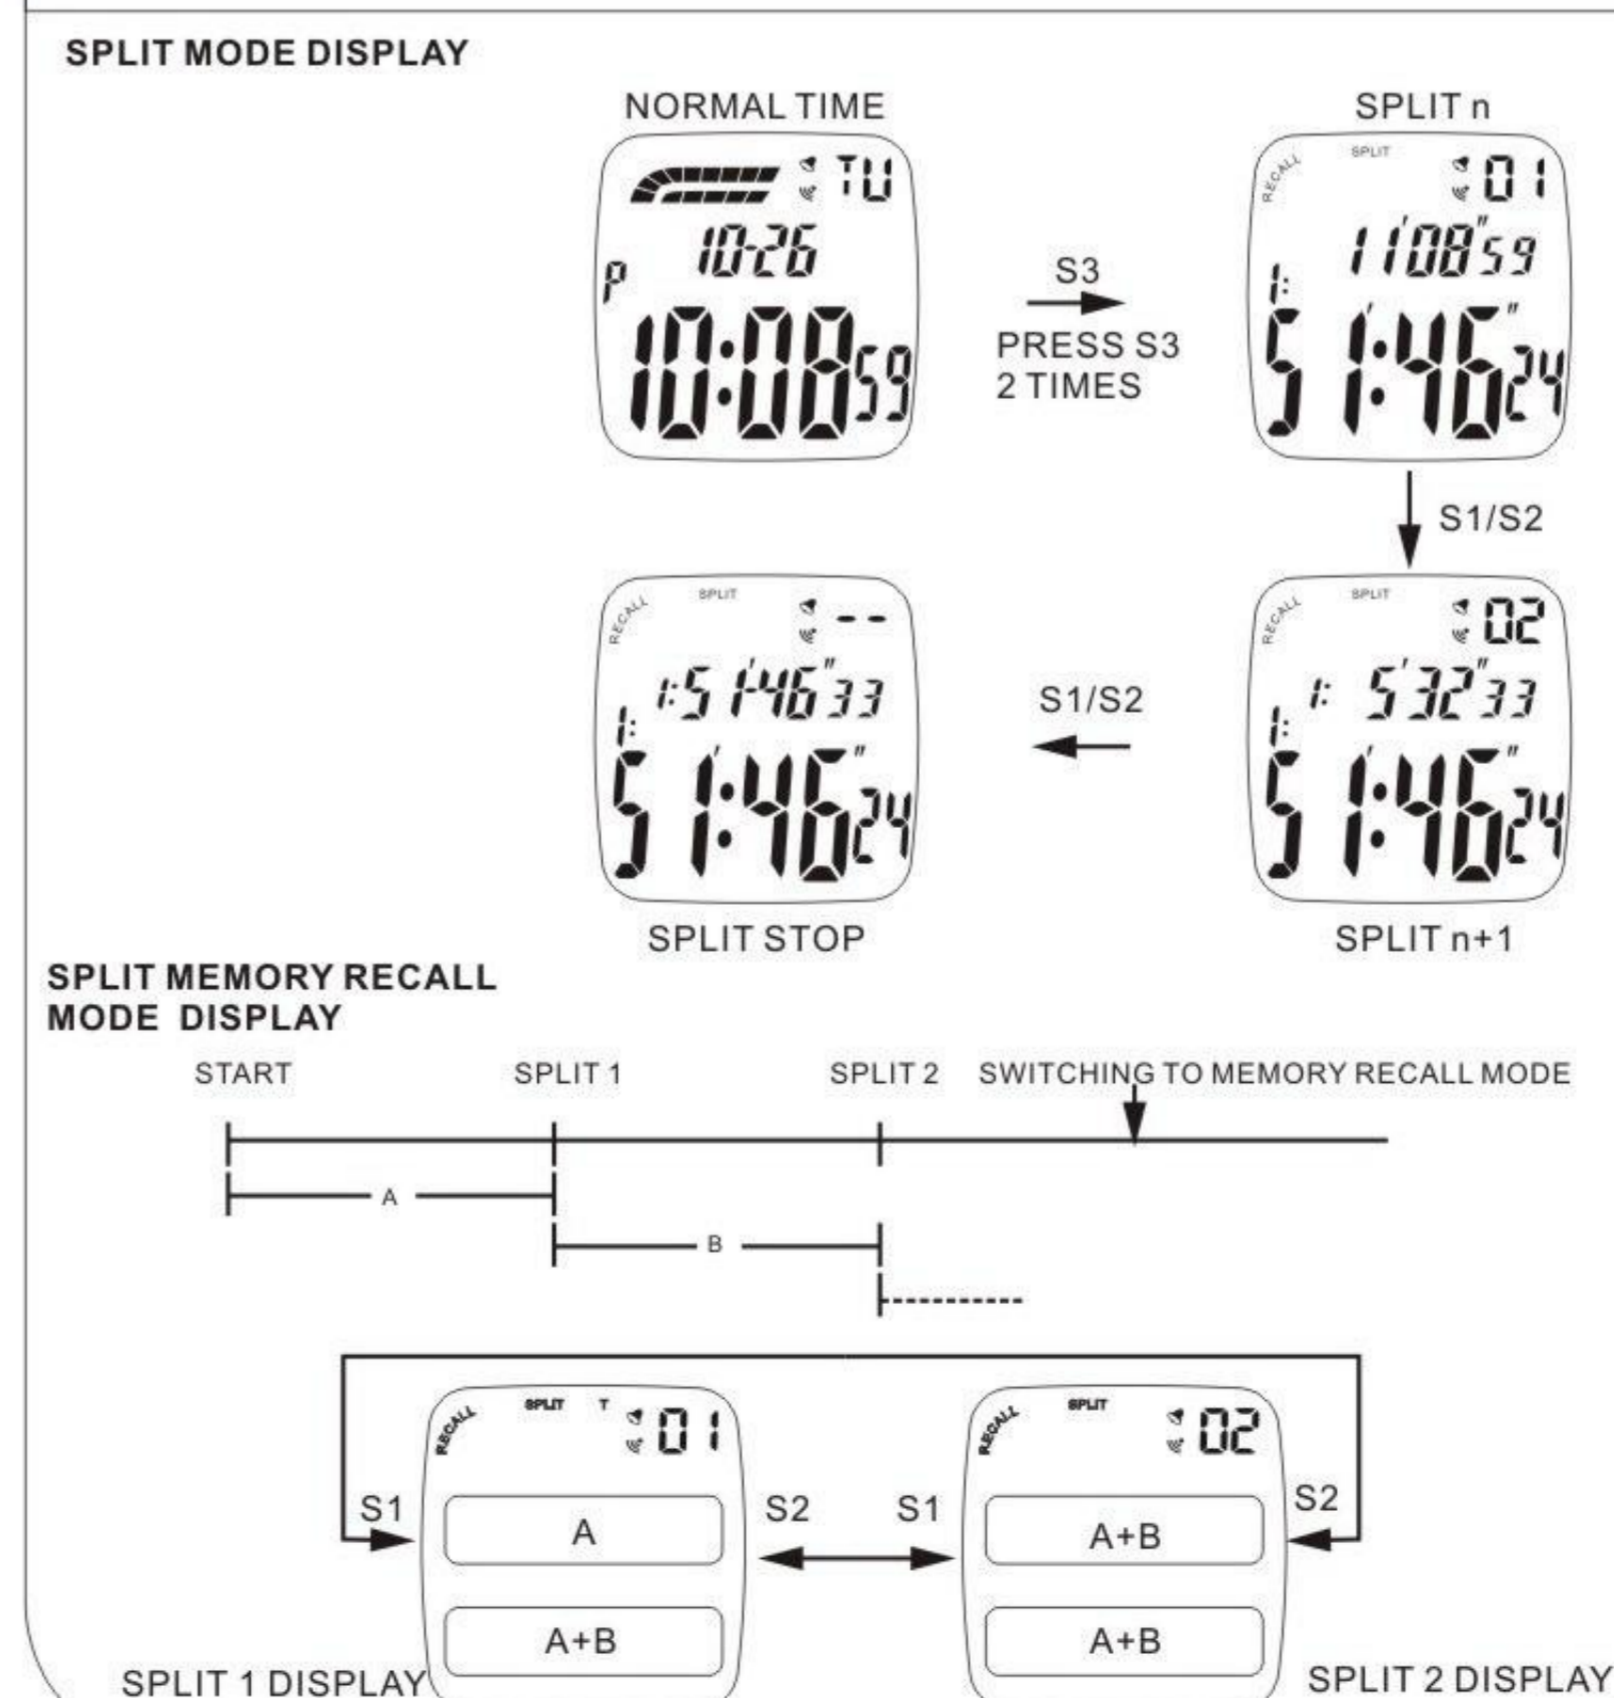

### MEMORY RECALL MODE

