

INSTRUCTION MANUAL 82790


ALARM CHRONOGRAPH MODULE



HOW TO USE ELECTRO-LUMINESCENT AND ELECTRIC TORCH

PRESS BUTTON S4 TO USE
ELECTRO LUMINESCENT FUNCTION.

PRESS BUTTON S2 TO USE
ELECTRIC TORCH FUNCTION.

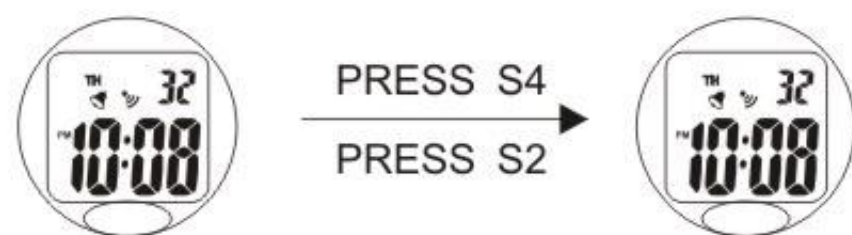


"NORMAL TIME DISPLAY"


CARE OF YOUR WATCH

1. This watch contains electronic components.
Never attempt to open the case or remove the back cover.
2. Do not operate push buttons below the surface of the water while swimming or diving.
3. Should water or condensation appear in the watch, have the watch checked immediately.
Corrosion of electronic parts can occur inside the case.
4. Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
5. Avoid exposing the watch to extreme temperature.
6. Clean the watch with soft cloth and clean water only. Avoid using chemicals.
7. Keep your watch away from the conditions of strong electric field and static electricity.


ALARM AND CHIME DISPLAY

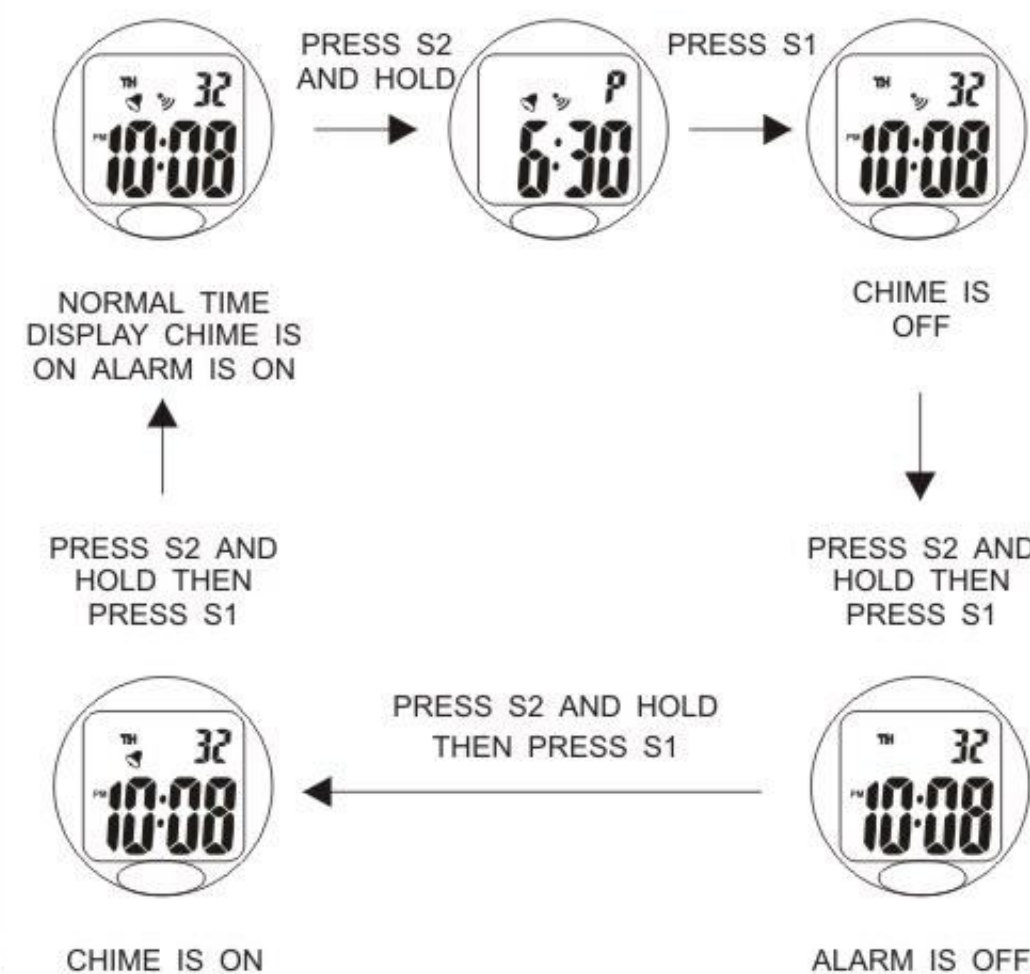


HOW TO SET THE ALARM TIME

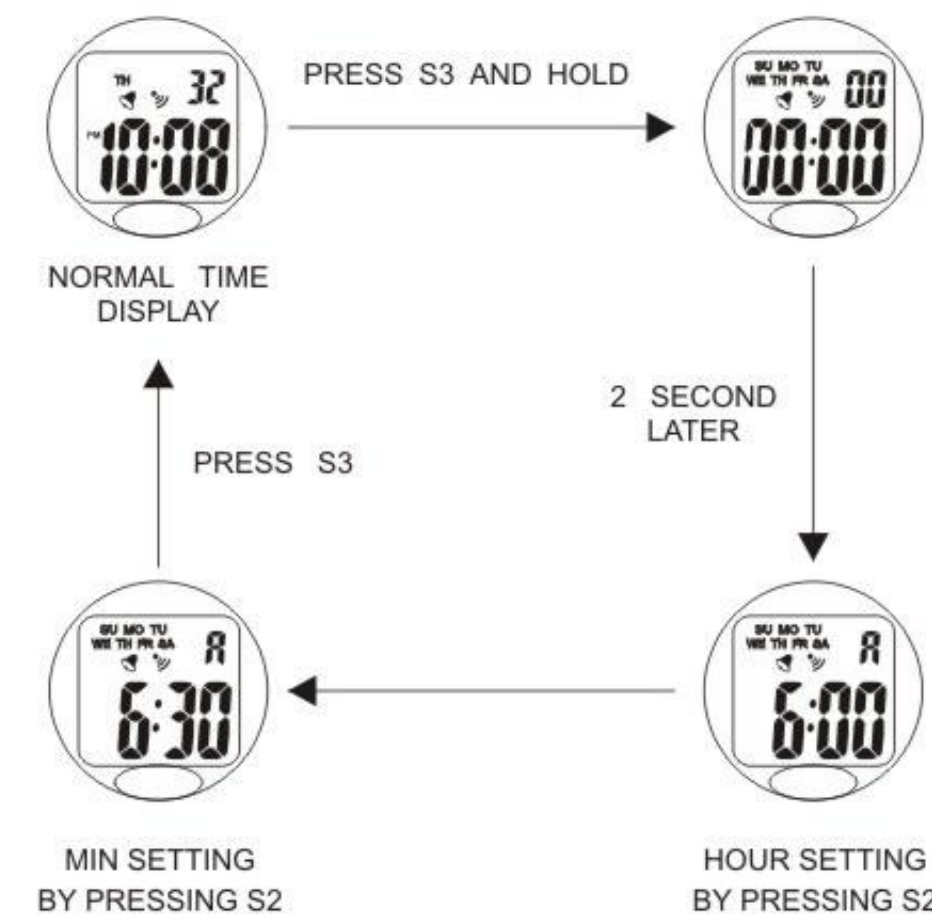


HOW TO OPERATE STOP WATCH

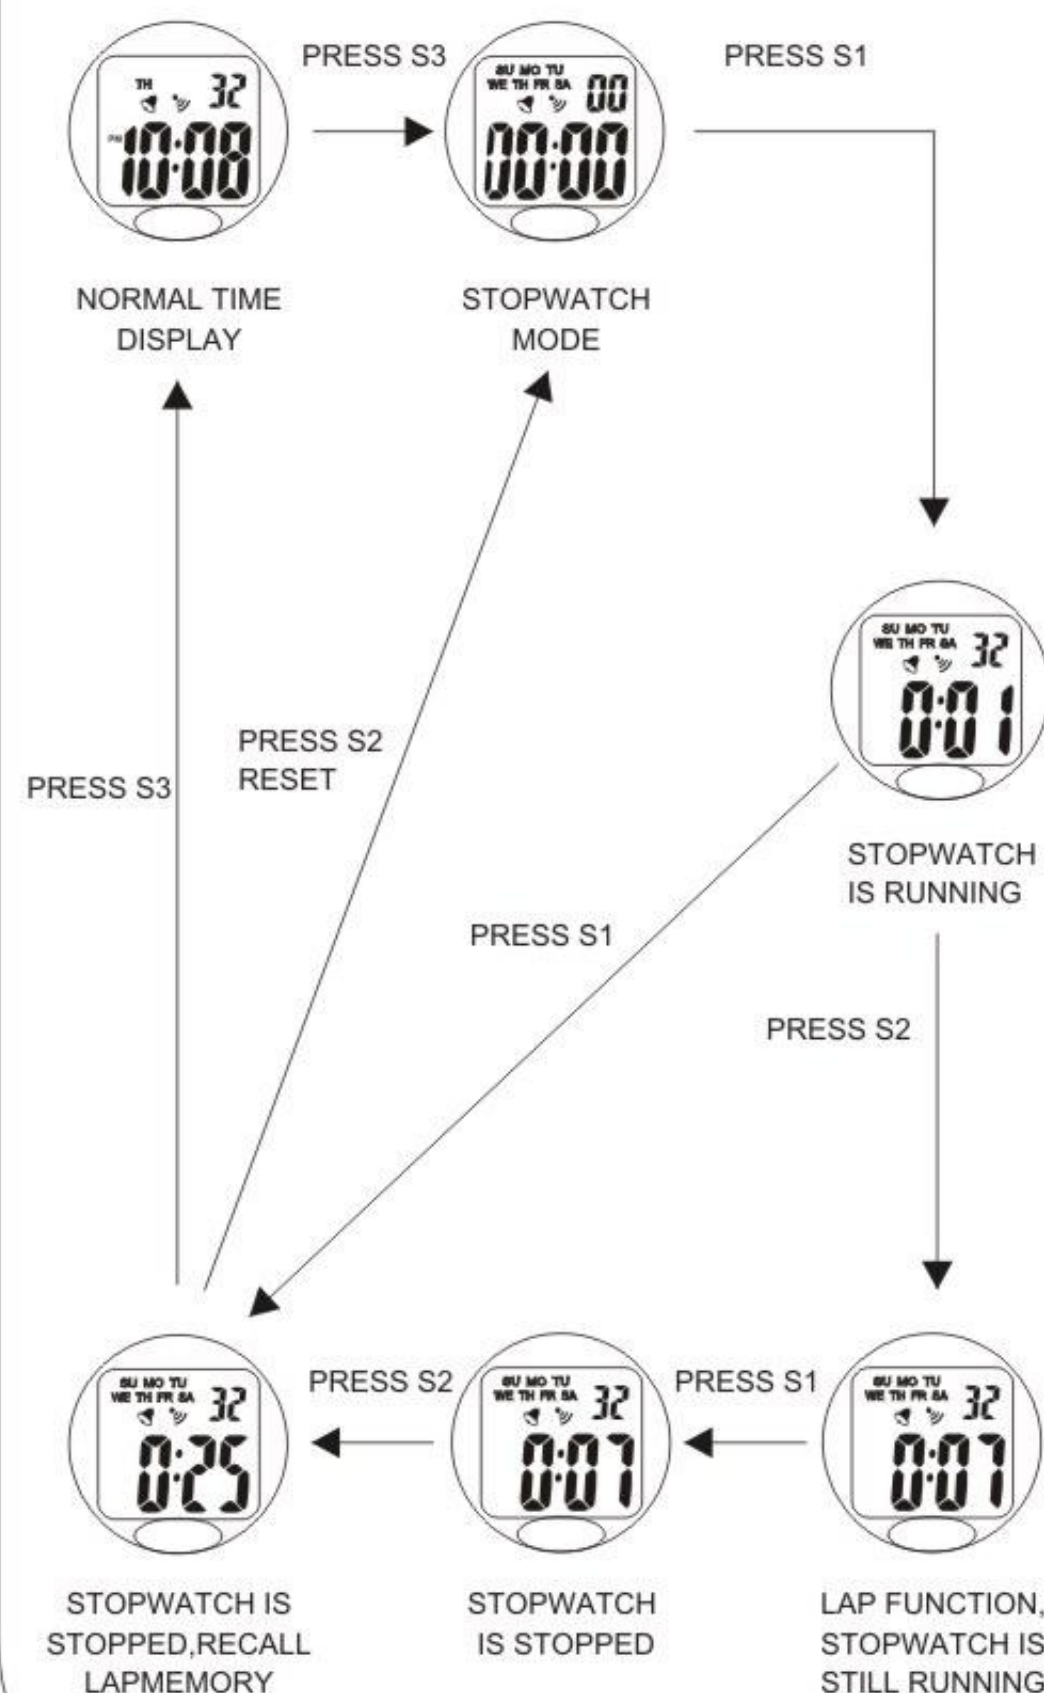

HOW TO SET NORMAL TIME

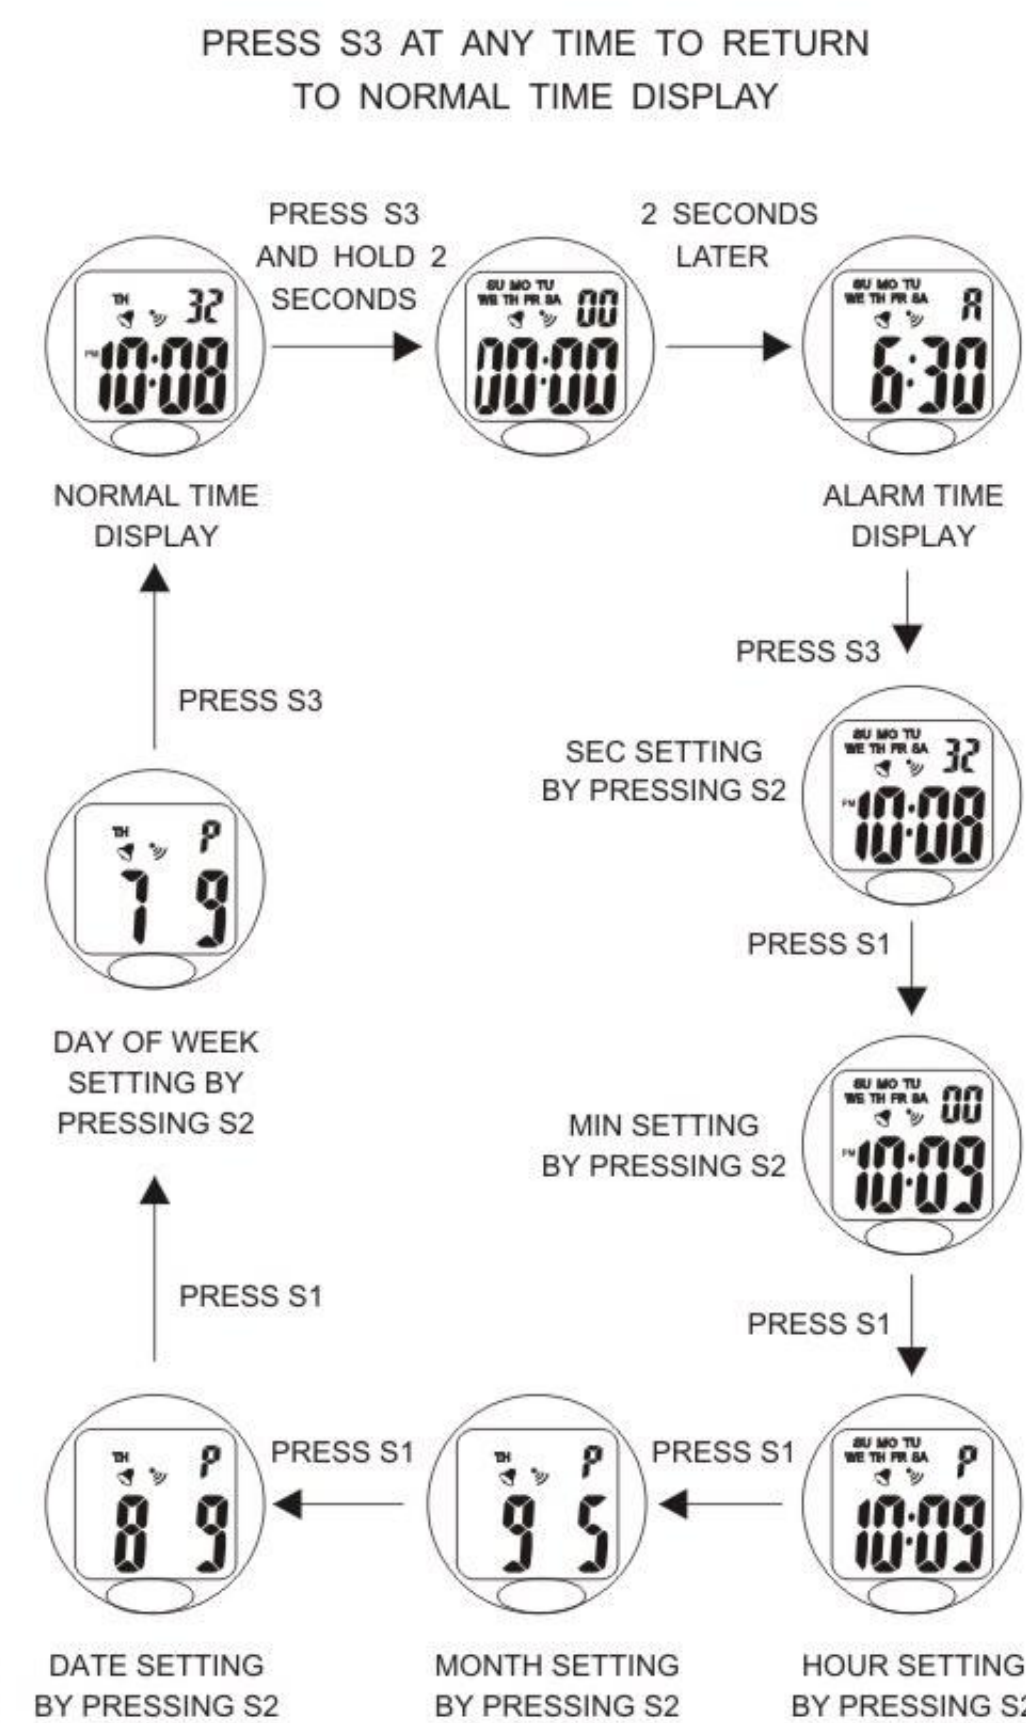


REGULAR DISPLAY AND BUTTON OPERATION

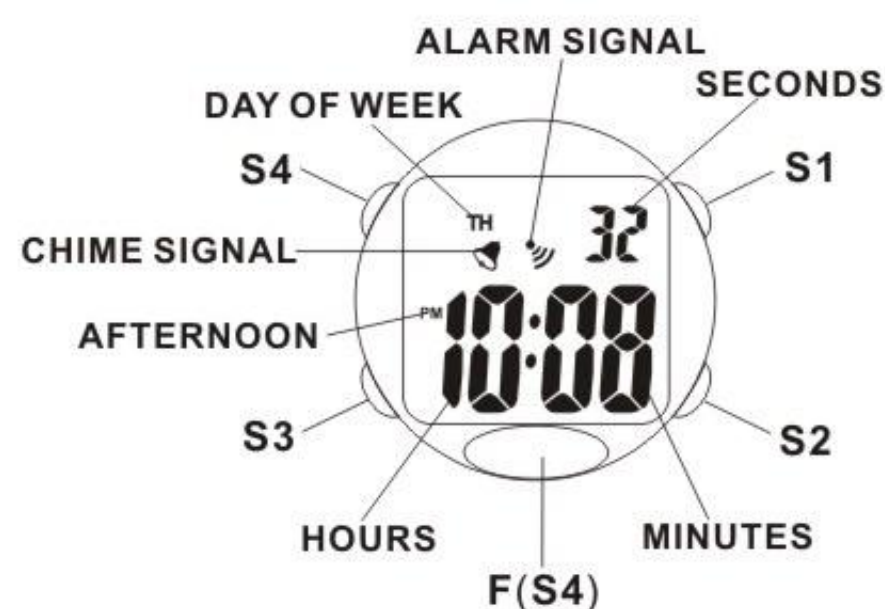

(Battery: CR2016 or CR2032)

- PRESS "BUTTON S2" AND HOLD IT, TO SHOW THE ALARM TIME, AT THE SAME TIME TORCH IS ON. RELEASE TO RETURN TO NORMAL TIME DISPLAY.
- PRESS "BUTTON S1" AND HOLD IT. TO SHOW THE MONTH/DATE OR "DATE/MONTH", RELEASE S1 RETURN TO NORMAL TIME DISPLAY.

HOW TO SET 12/24 HOUR FORMAT

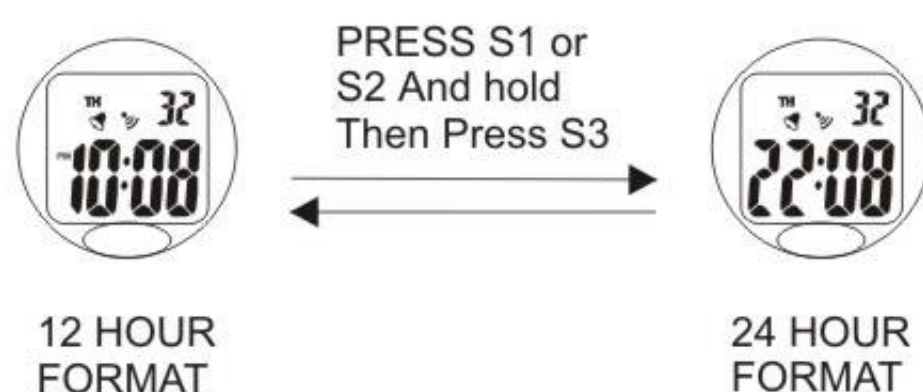

HOW TO DISPLAY MONTH/DATE

