 



INSTRUCTION MANUAL 84318









 
HOW TO DISPLAY CALENDAR

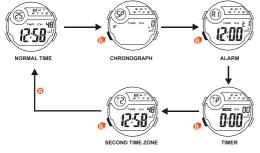





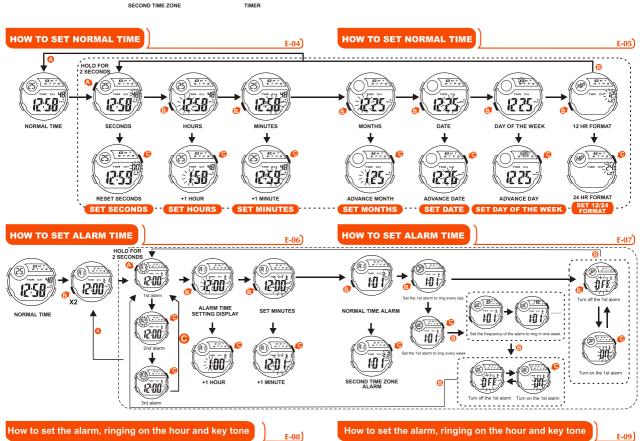



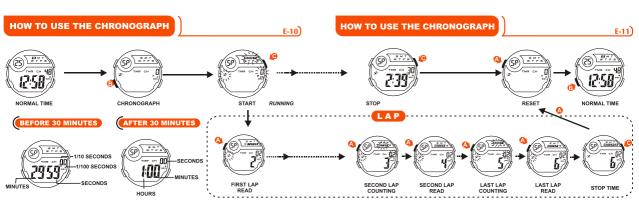


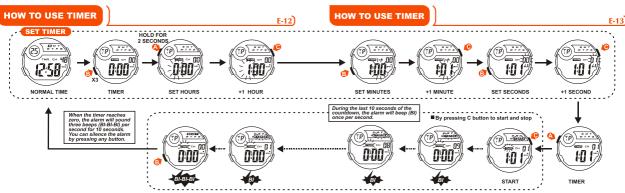

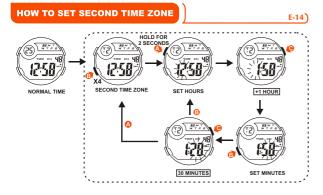

HOW TO USE EL LIGHT
 
<u>E-15</u>)



NOTE:

- This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
- 2. The illumination provided by backlight may hard to see under direct sunlight.

CARE OF YOUR WATCH

especially soap

case or remove the back cover.

- E-16)
- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- 2. Function:
 - * Month, Date AM/PM and Electro-Luminescent light. * Alarm function with buzzer signal output.
 - Chronograph function with lap opertaion.

FEATURES AND SPECIFICATIONS

- * Hourly chime.
- * 12/24 hour format switch option. Timer. * Second time zone.
- 3. Accuracy at normal temperature (25 °C): ± 30 seconds a month. 4. Normal operating temperature range: 10°C ~ 40°C.
- 1. This watch contains precise electronic components. Never attempt to open the
- 3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

2. Do not operate buttons while underwater, or while swimming or diving

7. Keep your watch away from strong electric fields and static electricity.

- 4. Avoid severe impact: The watch is designed to withstand impact under normal
- use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes. 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals,