



INSTRUCTION MANUAL 85271

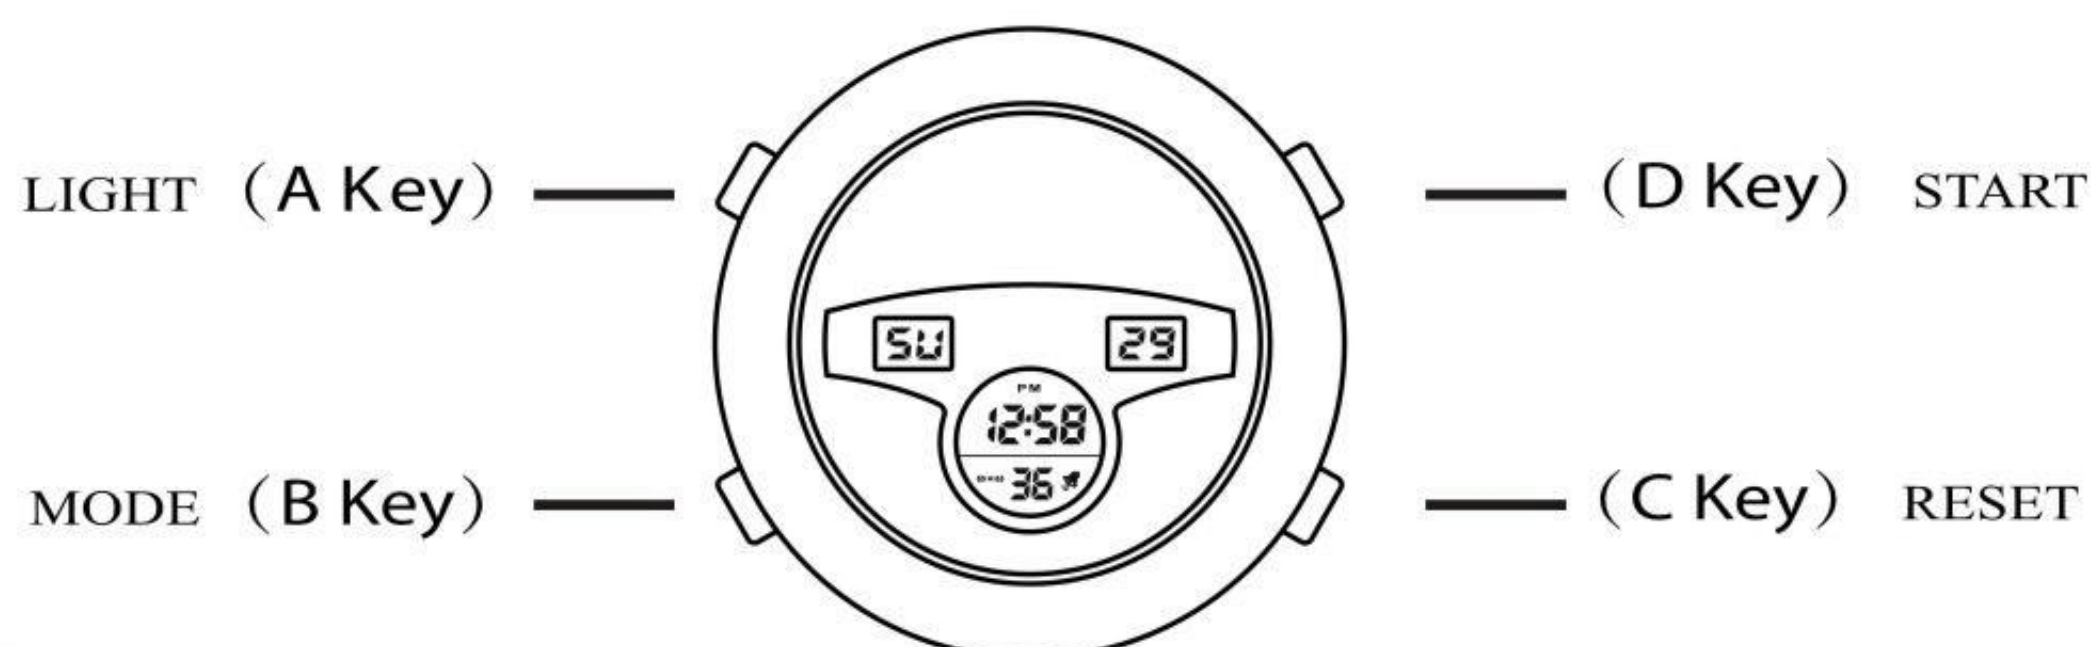

A . Features

- 10 Digits LCD Display, Display Hour ,Minute ,Second ,Month ,Day and Week
- Daily Alarm and Chime hourly
- 12 / 24H format selectable
- 1/100 second Chronograph with split functions
- EL backlight

B . Operational Manual

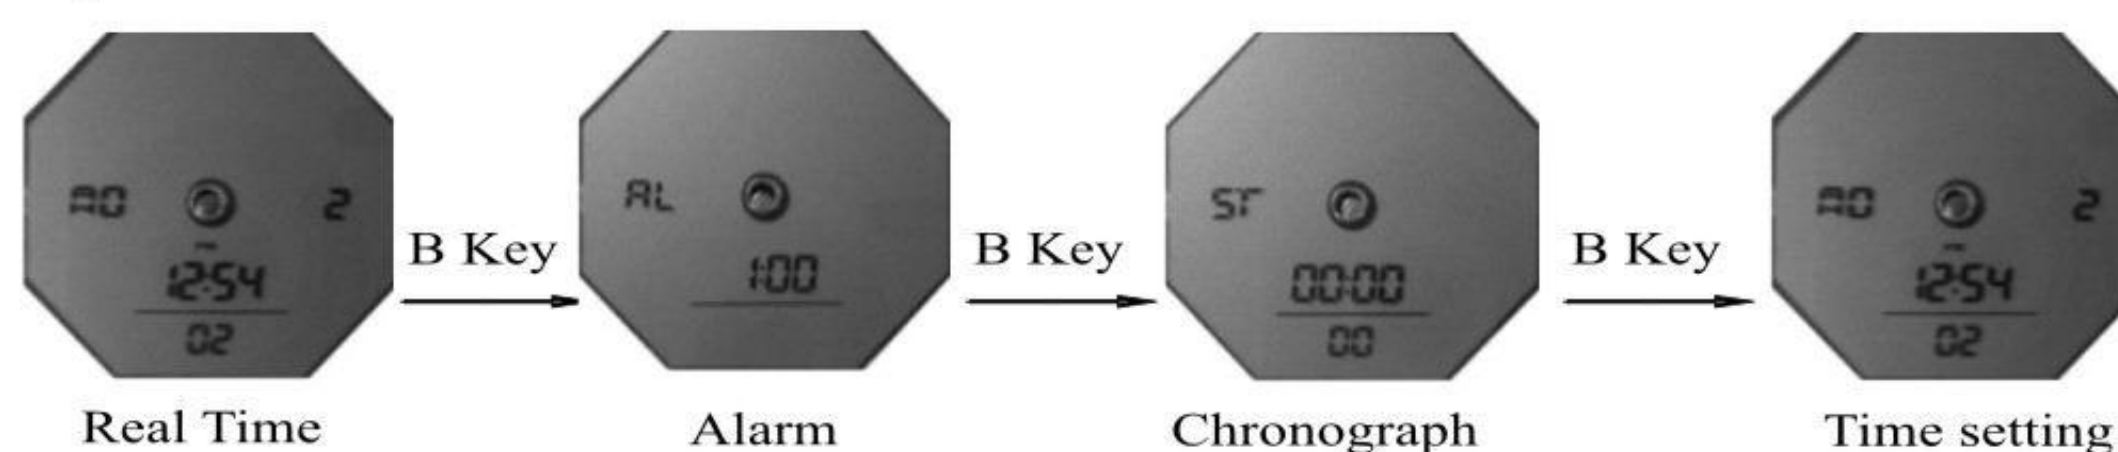



1. At any state ,press A key EL backlight for 3s .(EL backlight can be turned off by pressing B,C,or D key when it's illuminative.)

2. Real Time

- In Time Mode , press D key to toggle between .12HR and 24HR display format.

3. Daily Alarm

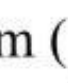- Turn On / Off Alarm and Chime
Press D key to turn on/off Alarm (“ ”) or Chime (“ ”)
- The alarm tone sounds at the preset time for about 20 seconds .Pressing any button stops the alarm tone operation .
- Alarm setting : Press C key to select "Hour " or "Minute "setting, Press D key to adjust the flashing item, Press C key to confirm, Press B key to return to Real Time mode.

4. Chronograph

- The display range of the Chronograph is 23hour,59 minutes,59.99seconds
- Press D key to Start/Stop running ;
- When stop ,press C key to zero .
- When running ,press C key to split count. indicator "SPL" showing
- Then press D key to exit split count ,and stop counting ; press C key again to zero ;
- When running ,press B key to return to Real Time Mode ,and it running at back .

5. Time Setting

- "Second " flashing when loading ,press D key to zero ; Press C key to select item as following sequence :
Hour → Minute → Month → Day → Day of Week → Second
- Press D key to adjust the flashing item.
- Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes . In the range of 00 to 29,the minutes are unchanged.