

NOWLEY


INSTRUCTION MANUAL 85297



A. Features

- 6 Digits LCD Display, Display Hour, Minute, Second, Month, Day and Week
- Daily Alarm and Chime hourly
- Snooze
- 12 / 24H format selectable, Auto Calendar
- 1/100 second Chronograph with split functions
- EL backlight

B. Operational Manual

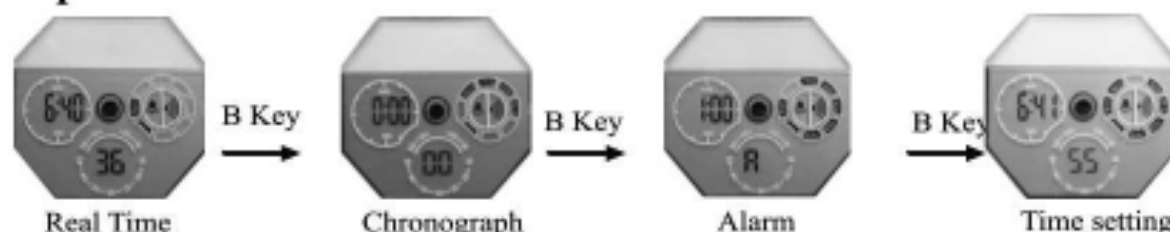

1. At any state, press A key EL backlight for 3s.

2. Real Time

- Press C key to display Alarm; Press D key to display Date.
- Turn On / Off Alarm and Chime
 - a). Press C + D key to turn on / off Alarm, indicator "A" displaying for on.
 - b). Press C + B key to turn on / off Chime, all days of week displaying for on.

3. Chronograph

- The display range of the Chronograph is 23 hours, 59 minutes, 59.99 seconds.
- Press D key to Start/Stop running;
- When stop, press C key to zero.
- When running, press C key to split count.
- Then press D key to exit split count, and stop counting;
- When exit split count, press C key to display all counts; and press C key again to zero;
- When running, press B key to return to Real Time Mode, and it running at back.

4. Daily Alarm

- "Hour" flashing once entry Daily Alarm.
- Press C key to select "Hour" or "Minute" setting
- Press D key to adjust the flashing item
- Press C key to confirm
- Press B key to return to Real Time mode
- Alarm Snooze ON/OFF

At Alarm sounding state, press C key to stop sounding, and press D key to activate the snooze function. When Snooze function be ON, it will sound five minutes later, and auto stop after sounding for a minute.

5. Time Setting

"Second" flashing when loading, press D key to zero; Press C key to select item as following sequence:
Minute — Hour — Day — Month — Week

- Press D key to adjust the flashing item.
- When setting "Hour", "H" display for 24H format; "A" or "P" for 12H format.
- Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes. In the range of 00 to 29, the minutes are unchanged.