


#### **INSTRUCTION MANUAL 85381**



### A. Features

- > 12 Digits LCD Display, Display Hour, Minute, Second, Month, Day and Week
- > Daily Alarm and Chime hourly
- Snooze
- ➤ 12 / 24H format selectable
- ➤ 1/100 second Chronograph with split functions
- > EL backlight

# **B**. Operational Manual

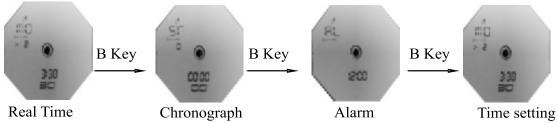

#### 1. At any state ,press A key EL backlight for 3s.

#### 2. Chronograph

- Press D key to Start/Stop running;
- ➤ When stop ,press C key to zero .
- ➤ When running ,press C key to split count. indicator "SP" showing
- > Then press D key to exit split count, and stop counting; press C key again to zero;
- When running ,press B key to return to Real Time Mode ,and it running at back .

# 3. Daily Alarm

- > Turn On / Off Alarm and Chime Press D key to turn on/off Alarm ((((()))) or Chime (())
- Alarm setting: Press C key to select "Hour" or "Minute "setting, Press D key to adjust the flashing item, Press C key to confirm, Press B key to return to Real Time mode.
- Alarm Snooze ON/OFF
  At Alarm sounding state ,press C key or D key to stop sounding ,and press B key to ON/OFF snooze function .When Snooze function be ON ,it will sound five minutes later ,and auto stop after sounding for 20 Second.

## 4. Time Setting

- "Second " flashing when loading ,press D key to zero; Press C key to select item as following sequence:
  Hour →Minute → Month → Day → Day of Week → Second
- ➤ When setting "Hour "," H " display for 2 4 H format; "A" or "P" for 1 2 H format.
- > Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes. In the range of 00 to 29,the minutes are unchanged.

Under the following conditions: (4 backlight operation (3 seconds) perday; 60 seconds of alarm operation per day)