

INSTRUCTION MANUAL 85526



- A. Features
 ≽12 Digits LCD Display ,Display Hour ,Minute ,Second ,Month ,Day and
- Daily Alarm and Chime hourly
- ≥12/24H format selectable, Auto Calendar

1

- >1/100 second Chronograph with split functions
- Fast advance for time and alarm time set.
- ►EL backlight

B. Operational Manual











Alarm







Time setting

Chronograph 1.At any state, press A key EL backlight for 3s.

2.Real Time

3.Chronograph

- >The display range of the Chronograph is 23hour,59 minutes,59.99seconds
- > Press D key to Start/Stop running;
- > When stop , press C key to zero .
- >When running ,press C key to split count. indicator "LAP" showing
- Then press D key to exit split count, and stop counting; press C key to display all counts ,press C key again to zero ;
- >When running ,press B key to return to Real Time Mode ,and it running at back.

4.Daily Alarm

>Turn On / Off Alarm and Chime

2 3

Press D key to turn on/off Alarm (" ② ") or Chime (" 🌣 ") >Alarm setting: Press C key to select "Hour" or "Minute "setting, Press D key to adjust the flashing item, Press C key to confirm, Press B kev to return to Real Time mode.

►Alarm Snooze ON/OFF

At Alarm sounding state ,press C key or D key to stop sounding ,and press B key to ON/OFF snooze function . When Snooze function be ON . it will sound five minutes later, and auto stop after sounding for 20 Second.

>"Second " flashing when loading ,press D key to zero; Press C key to select item as following sequence:

 $\begin{array}{l} Hour \rightarrow Minute \rightarrow Month \rightarrow Day \rightarrow Day \ of \ Week \rightarrow Second \\ \triangleright When setting "Hour", "H" \ display for 2\ 4\ H\ format; "A" \ or "P" \end{array}$ for 12 H format.

>Press D key to adjust the flashing item.

Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes. In the range of 00 to 29, the minutes are unchanged.