



## **INSTRUCTION MANUAL 86036**

#### Features

- 1) 12digits display: Hour, Minute, Second, Month, Date, day of week.
- 2) Auto calendar from 2000 to 2049.
- 3) Daily alarm and hourly chime.
- 4) Dual time zone.
- Count down timer with maximum of 23 hour,minute and 59 second.
- 6) Chrono with 1/100 second.
- 7) 12 or 24 hour format.
- 8) 12 or 24 animation dots (fast or slow display scan).
- 9) EL backlight.

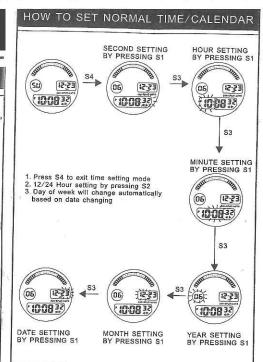

# LCD DISPLAY AND BUTTONS FUNCTION

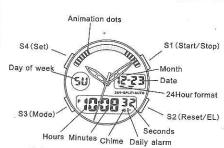


Animation dots display in two fashions. Press S2 to switch from fast to slow display scan; Press any key to switch from slow to fast.

## SETTING THE TIME (ANALOGUE)


- Pull the crown out one step, the second hand will stop.
- 2.Set the correct time by turning the crown.
- Push the crown back to the original position. The watch will start running again.




The analogue indication and digital display of the time setting can be adjusted separately.

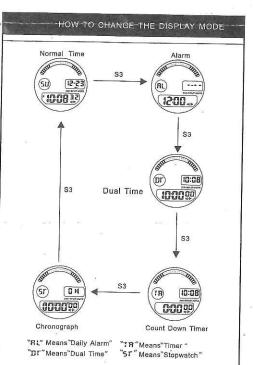





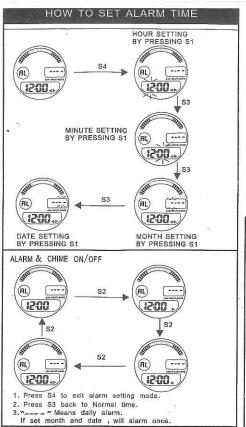




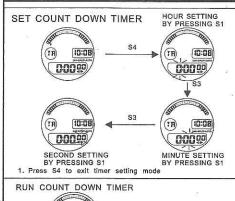

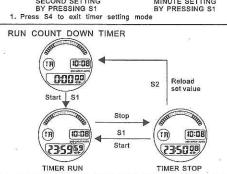

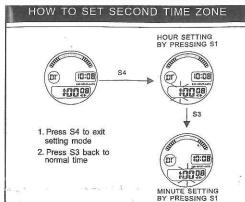

# HOW TO USE CHRONOGRAPH

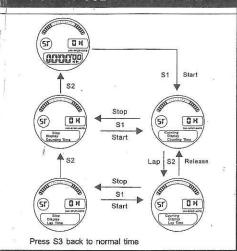

### **CARE OF YOUR WATCH**

- This watch contains electronic components.
  Never attempt to open the case or remove the back cover.
- 2.Do not operate push buttons below the surface of the water while swimming or diving.
- Should water or condensation appear in the watch, have the watch checked immediately.
   Corrosion of electronic parts can occur inside the case.
- 4.Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
- 5. Avoid exposing the watch to extreme temperature.
- Clean the watch with soft cloth and clean water only. Avoid using chemicals.
- Keep your watch away from the conditions of strong electric field and static electricity.