 


INSTRUCTION MANUAL 86076

HOW TO CHANGE THE DISPLAY MODE

 



REGULAR DISPLAY AND BUTTON OPERATION


ADJUST,START/STOP


HOW TO DISPLAY CALENDAR

 




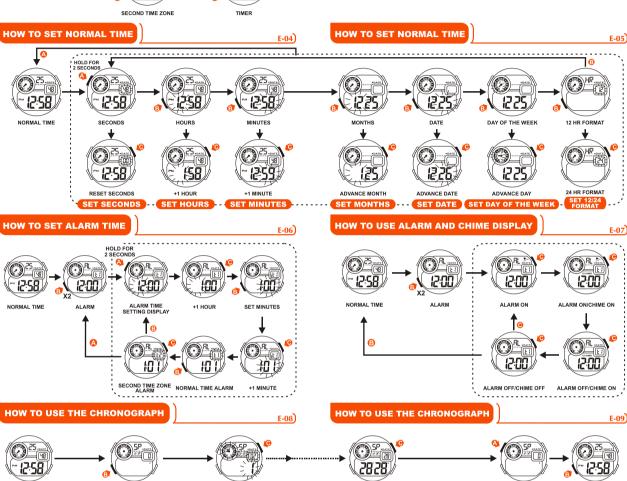

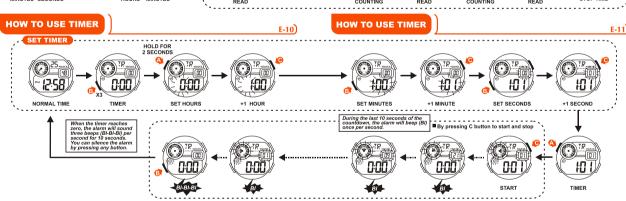

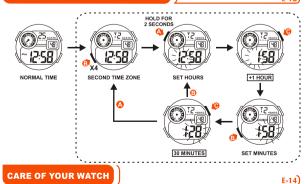



- 2. The illumination provided by backlight may hard to see under direct sunlight.

FEATURES AND SPECIFICATIONS

E-15)

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving. 3. Should water or condensation appear in the watch, immediately have the watch
- checked. Water can corrode electronic parts inside the case. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals,
- especially soap. 7. Keep your watch away from strong electric fields and static electricity.
- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- 2. Function:
 - * Month, Date AM/PM and Electro-Luminescent light.
 - * Alarm function with buzzer signal output. * Chronograph function with lap opertaion.
- * Hourly chime.

Timer.

- * 12/24 hour format switch option.
- * Second time zone. 3. Accuracy at normal temperature (25°C): ± 30 seconds a month.
- 4. Normal operating temperature range: 10°C ~ 40°C.