

- atch features an electro-luminescent (EL) backlight,
- which tends to lose illuminating power after very long use The illumination provided by backlight may hard to see under direct sunlight.

HOW TO USE EL LIGHT

NOTE

- CARE OF YOUR WATCH
- 1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- 4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap. 7. Keep your watch away from strong electric fields and static electricity.

5. Avoid exposing the watch to temperature extremes.

SOUND

1.Button tone: Turn ON or OFF, see "How to set function display." 2.Beeps with each press of a button except for the LIGHT button . 3.The button will only beep once when pressed and held 4.Alarm duration: 20 sec, two short beeps per second, beep once every hour. 5.The TIMER sound will take priority over the ALARM sound

- **FEATURES AND SPECIFICATIONS** 1. Standard display mode: Hour, Minutes, Seconds, Day of the week, Month, Date.
- 2. Function: 100-hour chronograph with momory for 50 laps / splits, and average lap.
  - \* Second time zone. \* Hourly chime. \* Perpetual calendar.
- 3. Accuracy at normal temperature (25°C): ±30 seconds a month.
- \* 24-hour countdown timer.

  \* 8 alarm (4 daily / 4 date) function with buzzer signal output.
- 12/24 hour format switch option \* AM / PM & Electro-Lumine \* Button tone ON/OFF function scent light.
- 4. Normal operating temperature range: 10°C ~ 40°C.