


## **INSTRUCTION MANUAL 86126**



REGULAR DISPLAY AND BUTTON OPERATION





E-03)

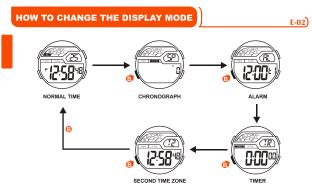






**HOW TO DISPLAY CALENDAR** 

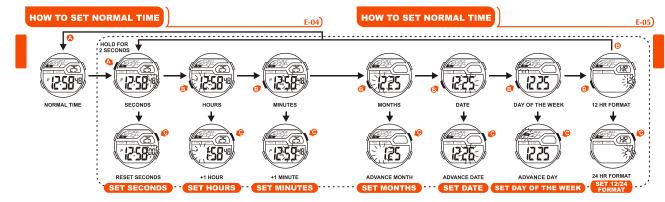

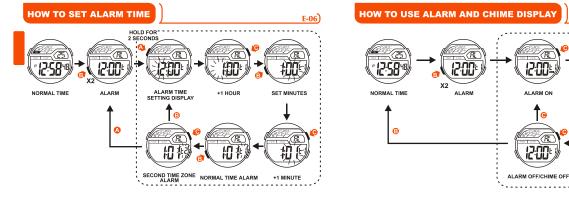

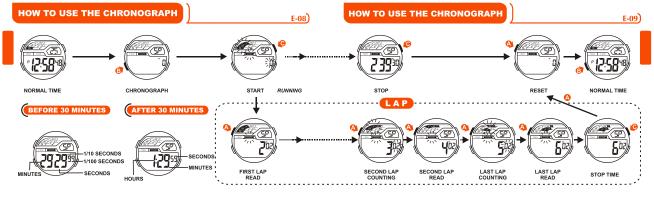


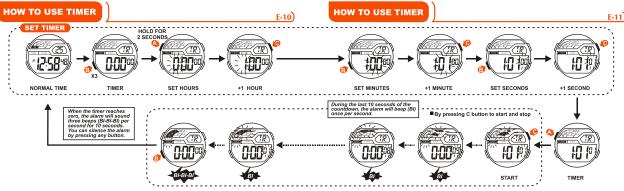

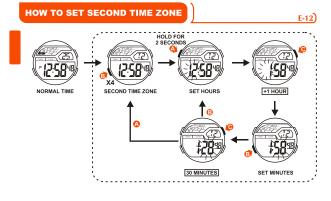

**HOW TO USE EL LIGHT** 

 E-13)



## NOTE:

- This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
- The illumination provided by backlight may hard to see under direct sunlight.

## CARE OF YOUR WATCH

- 1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving.
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- 4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- 7. Keep your watch away from strong electric fields and static electricity.

## FEATURES AND SPECIFICATIONS

- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- \* Month, Date AM/PM and Electro-Luminescent light.
- Alarm function with buzzer signal output. \* Chronograph function with lap opertaion.
- \* Hourly chime.
- \* 12/24 hour format switch option. \* Timer. \* Second time zone.
- 3. Accuracy at normal temperature (25°C): ±30 seconds a month. 4. Normal operating temperature range:  $10^{\circ}$ C ~  $40^{\circ}$ C.

<u>E-15</u>)