

INSTRUCTION MANUAL 86127


HOW TO CHANGE THE DISPLAY MODE


DAY OF THE WEEK ◀ MINUTES SECONDS HOURLY CHIME DATE <


REGULAR DISPLAY AND BUTTON OPERATION

♠ ADJUST,START/STOP
♠ LIGHT


HOW TO DISPLAY CALENDAR

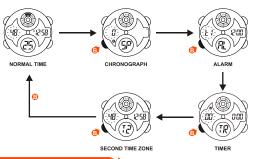


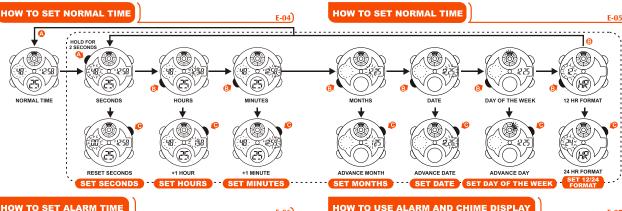

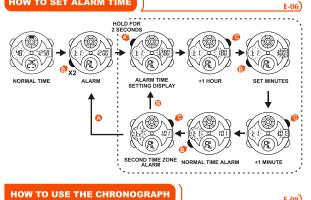


HOW TO USE THE CHRONOGRAPH

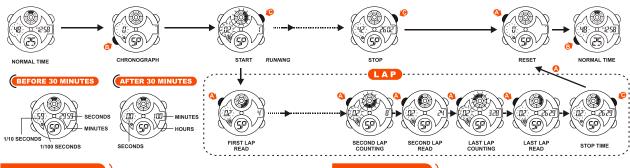

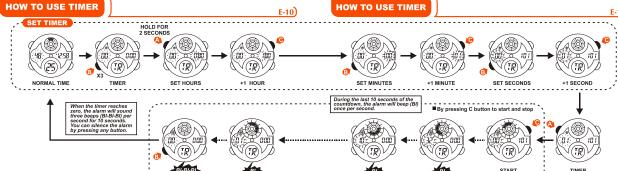

E-14)

 HOW TO SET SECOND TIME ZONE 30 MINUTES SET MINUTES CARE OF YOUR WATCH



NOTE:

HOW TO USE EL LIGHT

- This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
- The illumination provided by backlight may hard to see under direct sunlight.

FEATURES AND SPECIFICATIONS

- 1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving.
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto
- 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- 7. Keep your watch away from strong electric fields and static electricity.
- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week. 2. Function:
- Month, Date AM/PM and Electro-Luminescent light.
 - * Alarm function with buzzer signal output. * Chronograph function with lap opertaion.
 - * Hourly chime.

Timer

- * 12/24 hour format switch option.
- * Second time zone. 3. Accuracy at normal temperature (25 °C): \pm 30 seconds a month. 4. Normal operating temperature range: 10 °C ~ 40 °C.