


# NOWLEY

## INSTRUCTION MANUAL 86128


### REGULAR DISPLAY AND BUTTON OPERATION

E-01

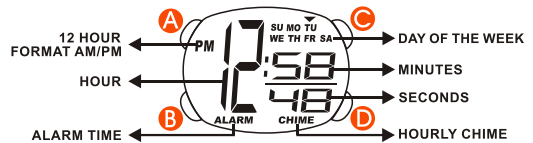

### HOW TO SET NORMAL TIME

E-02

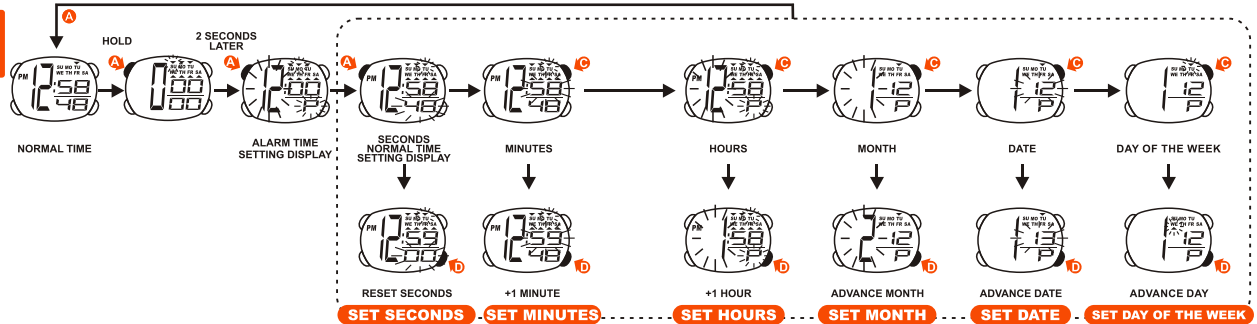


### HOW TO SET NORMAL TIME

E-03

### HOW TO DISPLAY MONTH, DATE

E-04

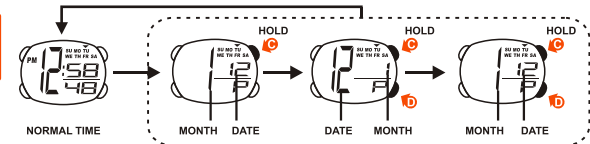

### HOW TO USE EL LIGHT


E-05



NOTE:


1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
2. The illumination provided by backlight may hard to see under direct sunlight.

### 12/24 HOUR FORMAT DISPLAY

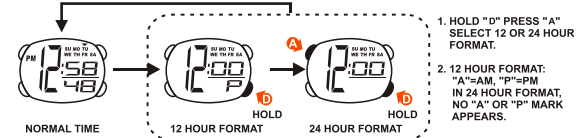


### HOW TO SET ALARM TIME

E-06

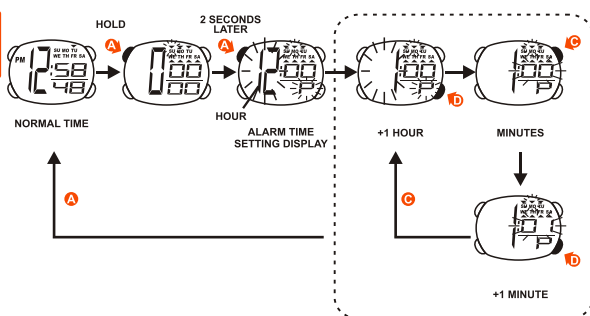


### HOW TO USE ALARM AND CHIME DISPLAY

E-07

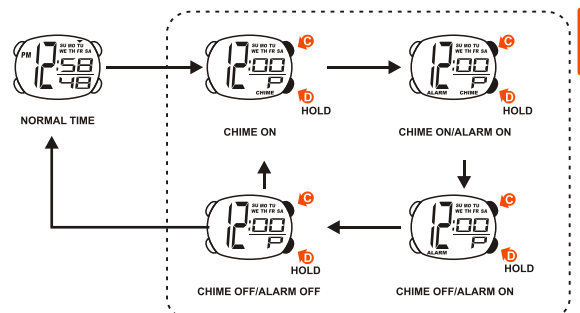

### HOW TO USE THE CHRONOGRAPH

E-08

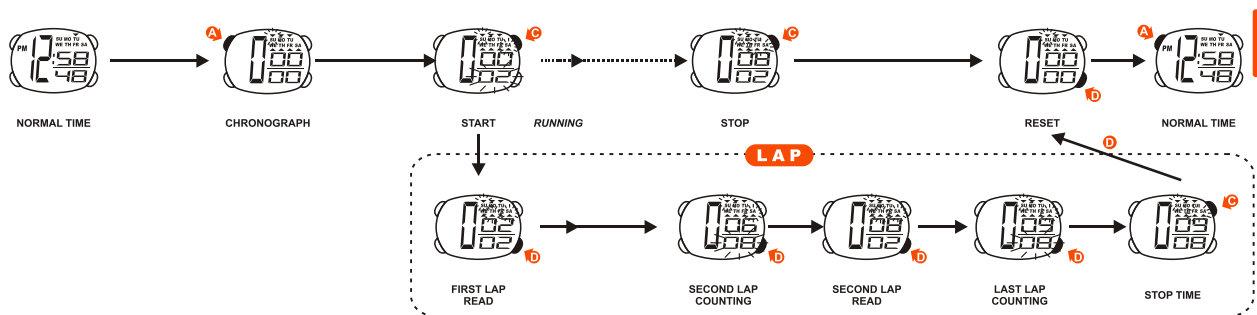

### HOW TO USE THE CHRONOGRAPH

E-09

### CARE OF YOUR WATCH

E-10

1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
2. Do not operate buttons while underwater, or while swimming or diving.
3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
5. Avoid exposing the watch to temperature extremes.
6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
7. Keep your watch away from strong electric fields and static electricity.

### FEATURES AND SPECIFICATIONS

E-11

1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
2. Functions:
  - \* Month, Date, AM/PM Indicator, and Electro-Luminescent backlight.
  - \* Alarm function with beep signal.
  - \* Stopwatch function with lap timer.
  - \* Hourly chime.
  - \* 12/24 hour format option.
3. Accuracy at normal temperature (25°C): ±30 seconds a month.
4. Normal operating temperature range: 10°C ~ 40°C.
5. Battery: □CR2016 □CR1620 □CR2025 □CR2032