




INSTRUCTION MANUAL 86131

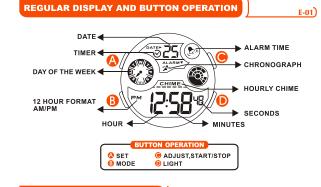


HOW TO DISPLAY CALENDAR

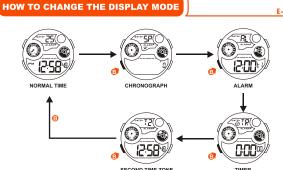



CALENDAR

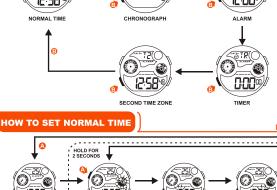





 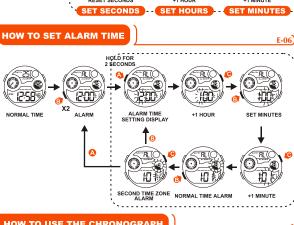


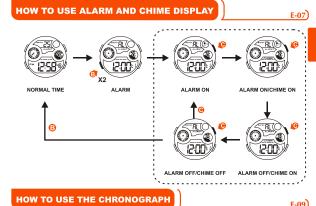


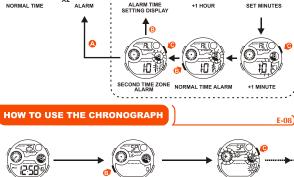

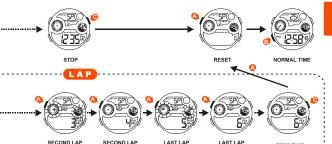

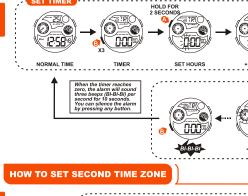



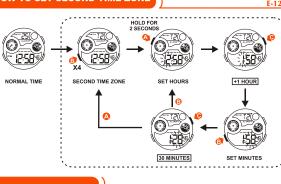

NOTE:

E-13)

E-15)

E-14)

FEATURES AND SPECIFICATIONS

1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.

1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use. The illumination provided by backlight may hard to see under direct sunlight.

- * Month, Date AM/PM and Electro-Luminescent light. * Alarm function with buzzer signal output.
- * Chronograph function with lap opertaion.
- * Hourly chime. * 12/24 hour format switch option.
- * Timer. * Second time zone.

- 3. Accuracy at normal temperature (25°C): ± 30 seconds a month. 4. Normal operating temperature range: 10° C ~ 40° C.

CARE OF YOUR WATCH

hard surfaces.

HOW TO USE TIMER

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving. 3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto
- 5. Avoid exposing the watch to temperature extremes. 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals,
- especially soap. 7. Keep your watch away from strong electric fields and static electricity.

CERTIFICAT DE GARANTIE

GUARANTEE CERTIFICATE

MODEL: MODELE:		
DATE OF P	Purchase: Chat:	
	DEALER STAMP: I DU DETAILLANT OFFICIEL:	
9950-82307ENO	1010	