

INSTRUCTION MANUAL 86133

HOURLY CHIME DAY OF THE WEEK CHRONOGRAPH ◀


REGULAR DISPLAY AND BUTTON OPERATION





HOW TO CHANGE THE DISPLAY MODE HOW TO DISPLAY CALENDAR E-02)


E-01)


E-03)

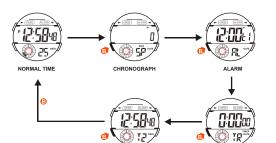


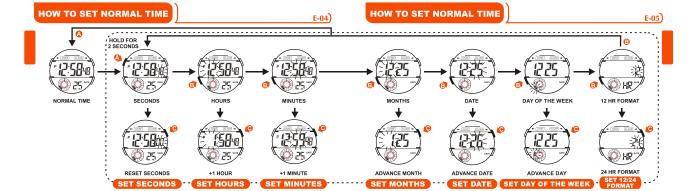


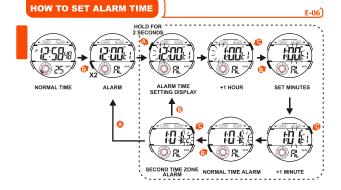

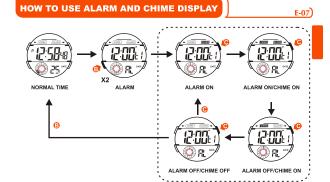

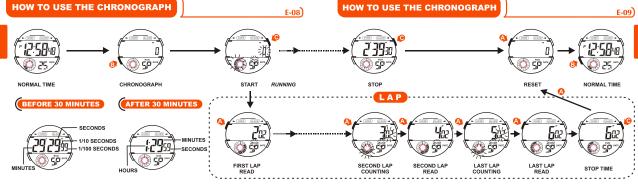


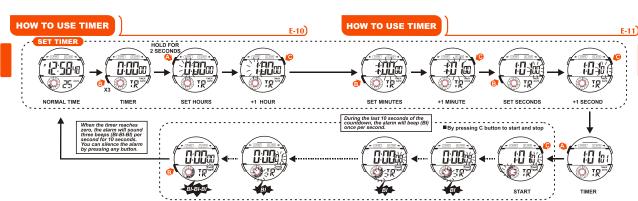

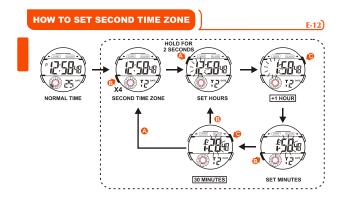

HOW TO USE EL LIGHT

 E-13)



NOTE:

- 1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
- The illumination provided by backlight may hard to see under direct sunlight.

CARE OF YOUR WATCH

- 1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving.
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- 4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto
- 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals,
- 7. Keep your watch away from strong electric fields and static electricity.
- FEATURES AND SPECIFICATIONS
- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- 2. Function: * Month, Date AM/PM and Electro-Luminescent light.
- * Alarm function with buzzer signal output.
- * Chronograph function with lap opertaion. * Hourly chime.
- * 12/24 hour format switch option. * Timer.
- * Second time zone.
- 3. Accuracy at normal temperature (25 °C): \pm 30 seconds a month. 4. Normal operating temperature range: 10 °C \sim 40 °C.