



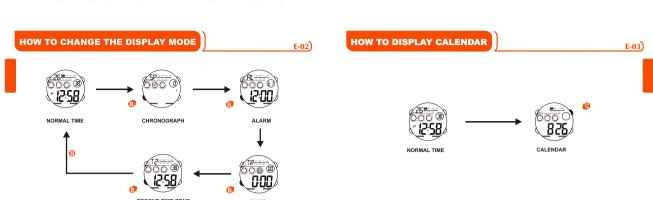


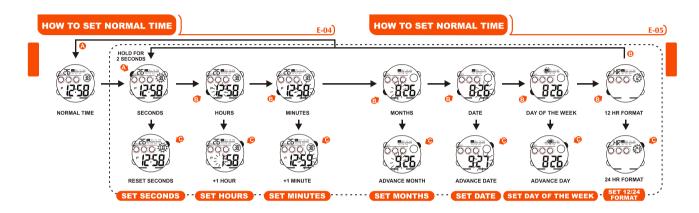



REGULAR DISPLAY AND BUTTON OPERATION







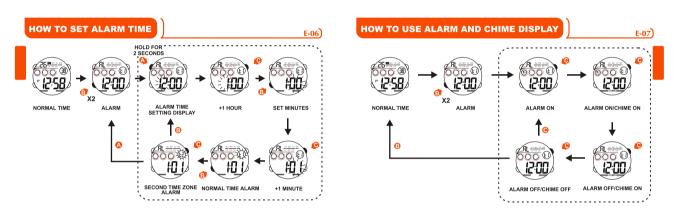

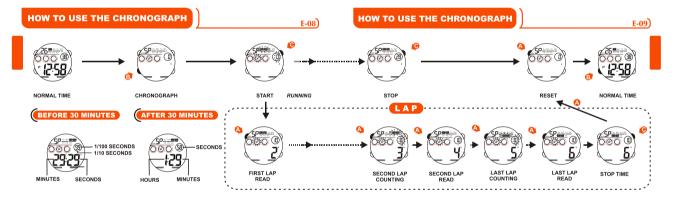

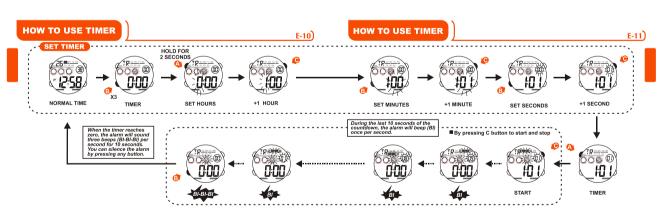

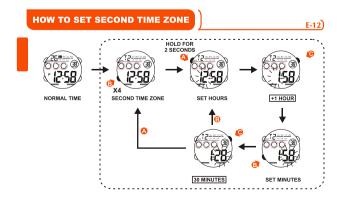

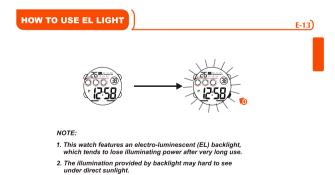

CARE OF YOUR WATCH

- E-14) This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- $2.\ \mbox{Do}$ not operate buttons while underwater, or while swimming or diving.
- 3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, 7. Keep your watch away from strong electric fields and static electricity.
- FEATURES AND SPECIFICATIONS

E-15)

- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- * Month, Date AM/PM and Electro-Luminescent light.
- * Alarm function with buzzer signal output.
- * Chronograph function with lap opertaion. * Hourly chime.
- * 12/24 hour format switch option. * Timer.
- * Second time zone. 3. Accuracy at normal temperature (25°C): ± 30 seconds a month.
- 4. Normal operating temperature range: 10° C ~ 40° C.