


## INSTRUCTION MANUAL 86145



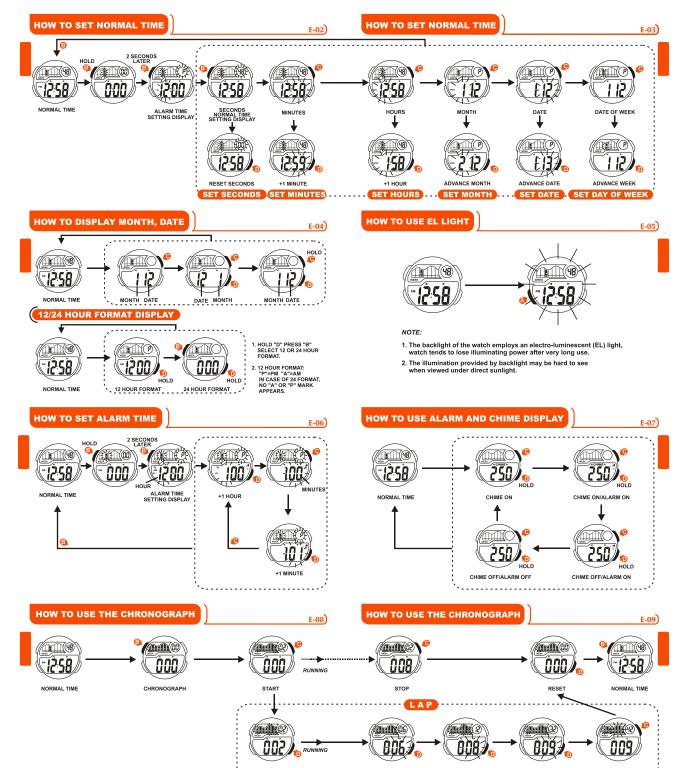

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2.Do not operate push buttons below the surface of the water when swimming or
- 3.Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- 4. Avoid severing impact: The watch is designed to with stand impact under normal use, It is inadvisable to subject it to severe impact of rough usage or drops onto hard surfaces.
- 5.Avoid exposing the watch to temperature extremes.

CARE OF YOUR WATCH

- Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- 7.Keep your watch away from the conditions of strong electric field and static electricity.

- Standard display mode: Hour, Minutes, Seconds, Day of week.
- 2 Function
  - \* Month, Date AM/PM and Electro-Luminescent light.
  - \* Alarm function with buzzer signal output.

FEATURES AND SPECIFICATIONS

- \* Chronograph function with lap opertaion.
- \* Hourly chime.
- \* 12/24 hour format switch option.
- 3. Accuracy at normal temperature (25°C):  $\pm$  30 seconds a month.
- 4. Normal operating temperature range: 10°C ~ 40°C.
- 5. Battery: model (CR1620) or equivalent.