


## **INSTRUCTION MANUAL** 86158




REGULAR DISPLAY AND BUTTON OPERATION




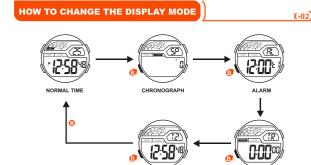






**HOW TO DISPLAY CALENDAR** 

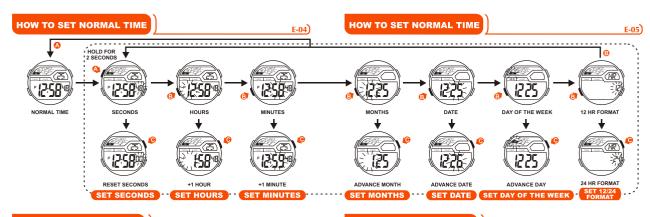


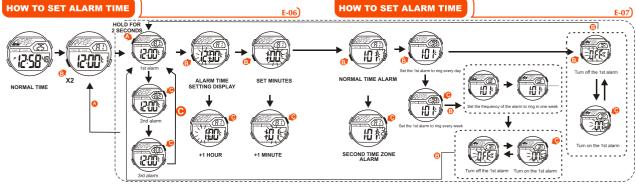

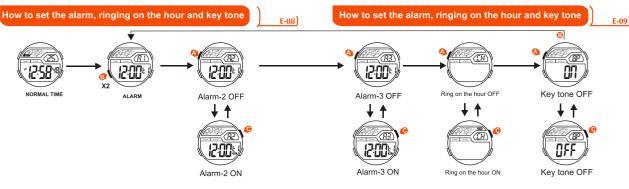

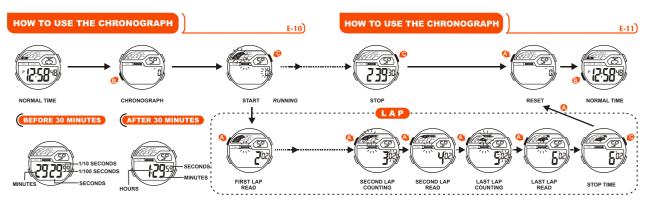

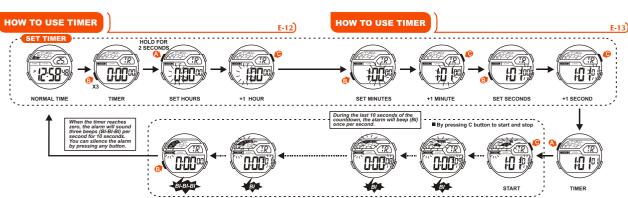

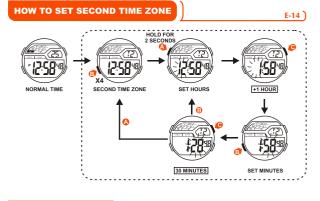

**HOW TO USE EL LIGHT** 

- This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
- The illumination provided by backlight may hard to see under direct sunlight.

## CARE OF YOUR WATCH

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving.
- 3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals,
- especially soap. 7. Keep your watch away from strong electric fields and static electricity.
- FEATURES AND SPECIFICATIONS
- ${\it 1. Standard\ display\ mode: Hour,\ Minutes,\ Seconds,\ Month,\ Day\ of\ the\ week.}$
- 2. Function:
- Month, Date AM/PM and Electro-Luminescent light.
- \* Alarm function with buzzer signal output.
- \* Chronograph function with lap opertaion.
- \* Hourly chime.
  \* 12/24 hour format switch option.
- \* Second time zone.
- 3. Accuracy at normal temperature (25  $^{\circ}\!\!C$  ):  $\stackrel{+}{\underline{\phantom{.}}}$  30 seconds a month.
- 4. Normal operating temperature range:  $10^{\circ}$ C ~  $40^{\circ}$ C.

E-17)

<u>E-15</u>)