






INSTRUCTION MANUAL 86160

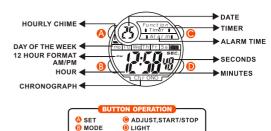


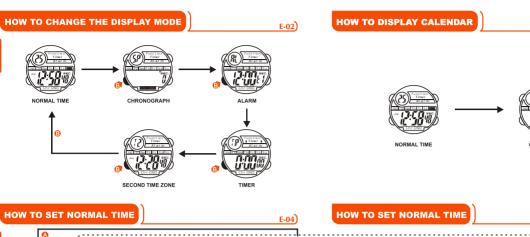

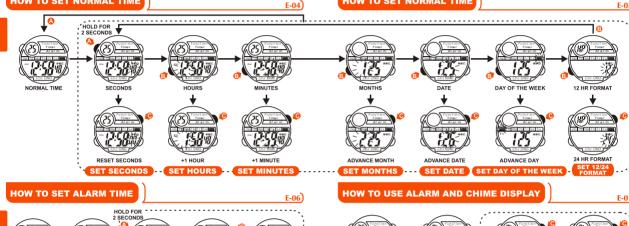


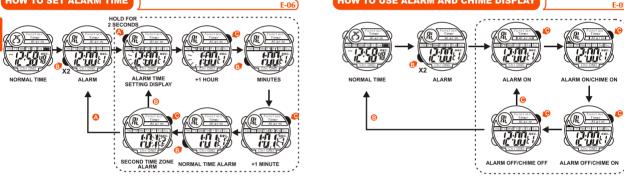

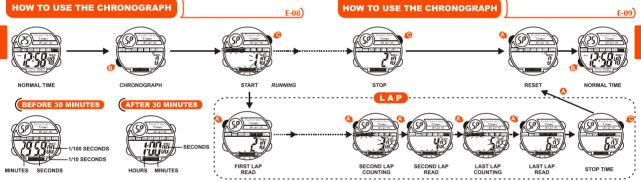

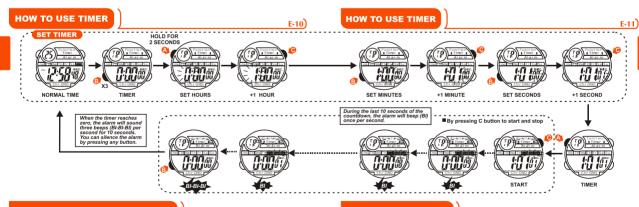



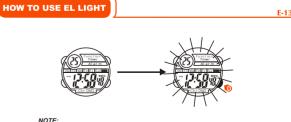

+1 HOUR

- 2. The illumination provided by backlight may hard to see under direct sunlight.

CARE OF YOUR WATCH

- 1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving.
- 3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals,
- especially soap. 7. Keep your watch away from strong electric fields and static electricity.
- FEATURES AND SPECIFICATIONS
- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week. 2. Function:
 - Month, Date AM/PM and Electro-Luminescent light.
 - * Alarm function with buzzer signal output. * Chronograph function with lap opertaion.
- * Hourly chime.
- * 12/24 hour format switch option.
- * Timer.
 * Second time zone.
- 3. Accuracy at normal temperature (25 °C): ±30 seconds a month.
- 4. Normal operating temperature range: 10°C ~ 40°C.