


## INSTRUCTION MANUAL 86165








**HOW TO DISPLAY CALENDAR** 


E-03)

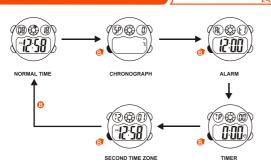


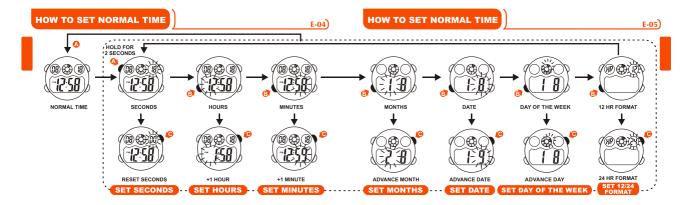


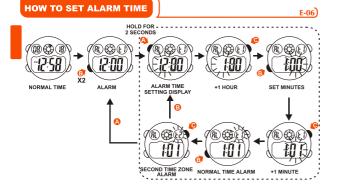

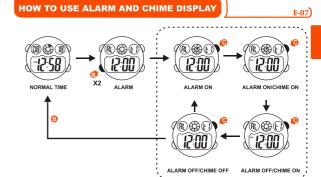

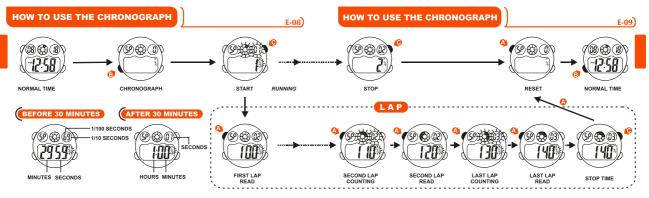


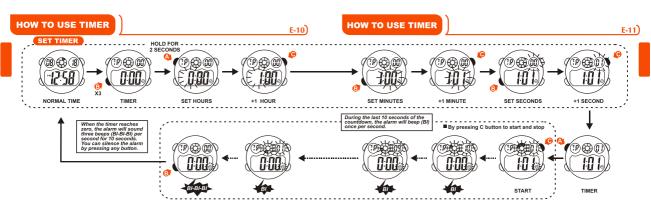

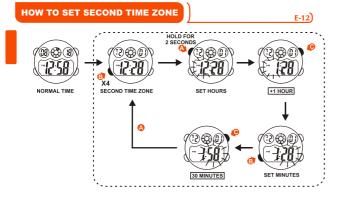

HOW TO USE EL LIGHT
 
<u>E-13</u>)



## NOTE:

- 1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use
- 2. The illumination provided by backlight may hard to see under direct sunlight.

## **CARE OF YOUR WATCH**

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover. 2. Do not operate buttons while underwater, or while swimming or diving.
- 3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.

7. Keep your watch away from strong electric fields and static electricity.

- 2. Function:
- \* Month, Date AM/PM and Electro-Luminescent light.
- \* Alarm function with buzzer signal output.
- \* Chronograph function with lap opertaion.
- \* Hourly chime.
- \* 12/24 hour format switch option.

FEATURES AND SPECIFICATIONS

\* Second time zone. 3. Accuracy at normal temperature (25  $^{\circ}\mathrm{C}$ ):  $\pm$  30 seconds a month.

4. Normal operating temperature range:  $10^{\circ}$ C ~  $40^{\circ}$ C.

E-15) 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.