

INSTRUCTION MANUAL 86163

THE STORY 12 HOUR FORMAT CHRONOGRAPH


REGULAR DISPLAY AND BUTTON OPERATION

ADJUST,START/STOP
 LIGHT

HOW TO DISPLAY CALENDAR

HOURLY CHIME ◀

E-03)

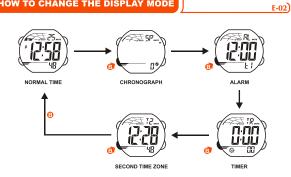


IOW TO SET NORMAL TIME


HOW TO CHANGE THE DISPLAY MODE


HOW TO SET NORMAL TIME

<u>E-05</u>)

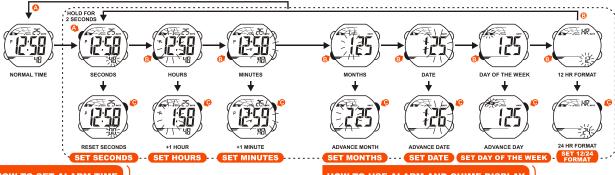


HOW TO SET ALARM TIME

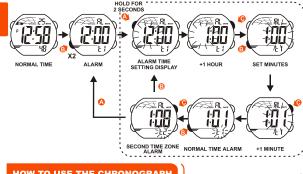

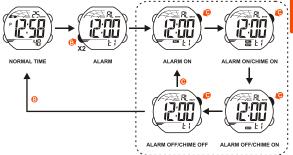


HOW TO USE THE CHRONOGRAPH

HOW TO USE THE CHRONOGRAPH E-08)

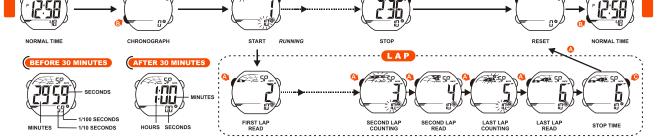


HOW TO USE TIMER

HOW TO USE TIMER

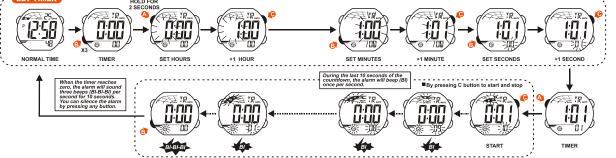

<u>E-13</u>)

<u>E-15</u>)

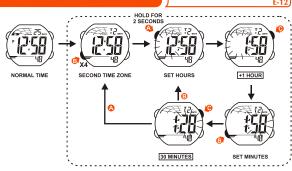

NOTE:

- This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use
- The illumination provided by backlight may hard to see under direct sunlight.

CARE OF YOUR WATCH

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving.
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- 4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto
- 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- 7. Keep your watch away from strong electric fields and static electricity.
- FEATURES AND SPECIFICATIONS
- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- 2. Function: * Month, Date AM/PM and Electro-Luminescent light.
 - * Alarm function with buzzer signal output.

 - * Chronograph function with lap opertaion. * Hourly chime.

 - * 12/24 hour format switch option. * Timer.
 * Second time zone.
- 3. Accuracy at normal temperature (25 °C): \pm 30 seconds a month. 4. Normal operating temperature range: 10 °C ~ 40 °C.