



# INSTRUCTION MANUAL 86166

REGULAR DISPLAY AND BUTTON OPERATION

E-01

DATE

CHRONOGRAPH

HOURLY CHIME

12 HOUR FORMAT AM/PM

TIMER

DAY OF THE WEEK

ALARM TIME

SECONDS

HOUR

MINUTES

BUTTON OPERATION

A SET

B MODE

C ADJUST, START/STOP

D LIGHT

HOW TO CHANGE THE DISPLAY MODE

E-02

NORMAL TIME

CHRONOGRAPH

ALARM

SECOND TIME ZONE

TIMER

HOW TO DISPLAY CALENDAR

E-03

NORMAL TIME

CALENDAR

HOW TO SET NORMAL TIME

E-04

NORMAL TIME

SECONDS

HOURS

MINUTES

RESET SECONDS

+1 HOUR

+1 MINUTE

SET SECONDS

SET HOURS

SET MINUTES

HOW TO SET NORMAL TIME

E-05

MONTHS

DATE

DAY OF THE WEEK

12 HR FORMAT

ADVANCE MONTH

ADVANCE DATE

ADVANCE DAY

24 HR FORMAT

SET MONTHS

SET DATE

SET DAY OF THE WEEK

SET 12/24 FORMAT

HOW TO SET ALARM TIME

E-06

NORMAL TIME

X2 ALARM

ALARM TIME SETTING DISPLAY

+1 HOUR

SET MINUTES

SECOND TIME ZONE ALARM

NORMAL TIME ALARM

+1 MINUTE

HOW TO USE ALARM AND CHIME DISPLAY

E-07

NORMAL TIME

X2 ALARM

ALARM ON

ALARM ON/CHIME ON

ALARM OFF/CHIME OFF

ALARM OFF/CHIME ON

HOW TO USE THE CHRONOGRAPH

E-08

NORMAL TIME

CHRONOGRAPH

START

RUNNING

STOP

RESET

NORMAL TIME

BEFORE 30 MINUTES

AFTER 30 MINUTES

MINUTES SECONDS

HOURS MINUTES

FIRST LAP READ

SECOND LAP COUNTING

SECOND LAP READ

LAST LAP COUNTING

LAST LAP READ

STOP TIME

HOW TO USE THE CHRONOGRAPH

E-09

NORMAL TIME

CHRONOGRAPH

START

RUNNING

STOP

RESET

NORMAL TIME

BEFORE 30 MINUTES

AFTER 30 MINUTES

MINUTES SECONDS

HOURS MINUTES

FIRST LAP READ

SECOND LAP COUNTING

SECOND LAP READ

LAST LAP COUNTING

LAST LAP READ

STOP TIME

HOW TO USE TIMER

E-10

SET TIMER

NORMAL TIME

TIMER

SET HOURS

+1 HOUR

SET MINUTES

+1 MINUTE

SET SECONDS

+1 SECOND

When the timer reaches zero, the alarm will sound three beeps (B1-B3-B1) per second for 10 seconds. You can silence the alarm by pressing any button.

During the last 10 seconds of the countdown, the alarm will beep (B1) once per second.

By pressing C button to start and stop

START

TIMER

HOW TO USE TIMER

E-11

SET TIMER

NORMAL TIME

TIMER

SET HOURS

+1 HOUR

SET MINUTES

+1 MINUTE

SET SECONDS

+1 SECOND

When the timer reaches zero, the alarm will sound three beeps (B1-B3-B1) per second for 10 seconds. You can silence the alarm by pressing any button.

During the last 10 seconds of the countdown, the alarm will beep (B1) once per second.

By pressing C button to start and stop

START

TIMER

HOW TO SET SECOND TIME ZONE

E-12

NORMAL TIME

SECOND TIME ZONE

SET HOURS

+1 HOUR

SET MINUTES

30 MINUTES

HOW TO USE EL LIGHT

E-13

NORMAL TIME

EL LIGHT

NOTE:

1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.

2. The illumination provided by backlight may hard to see under direct sunlight.

CARE OF YOUR WATCH

E-14

1. This watch contains precise electronic components. Never attempt to open the case or remove the back cover.

2. Do not operate buttons while underwater, or while swimming or diving.

3. Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.

4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto hard surfaces.

5. Avoid exposing the watch to temperature extremes.

6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.

7. Keep your watch away from strong electric fields and static electricity.

FEATURES AND SPECIFICATIONS

E-15

1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.

2. Function:

- \* Month, Date AM/PM and Electro-Luminescent light.
- \* Alarm function with buzzer signal output.
- \* Chronograph function with lap operation.
- \* Hourly chime.
- \* 12/24 hour format switch option.
- \* Timer.
- \* Second time zone.

3. Accuracy at normal temperature (25°C): ± 30 seconds a month.

4. Normal operating temperature range: 10°C ~ 40°C.