



# **INSTRUCTION MANUAL 86187**

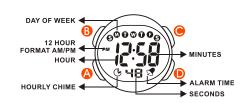

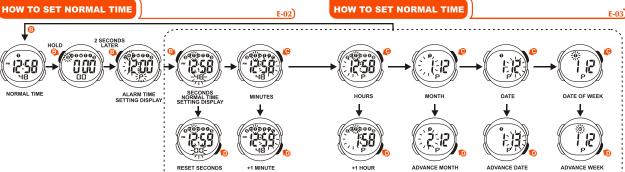









OW TO USE EL LIGHT

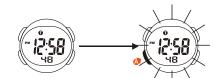

- The backlight of the watch employs an electro-lumine watch tends to lose illuminating power after very long
- 2. The illumination provided by backlight may be hard to see when viewed under direct sunlight.


### W TO SET ALARM TIME

IOW TO USE ALARM AND CHIME DISPLAY

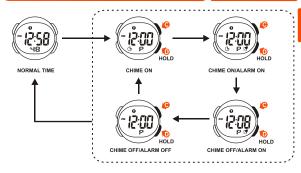

## W TO USE THE CHRONOGRAPH

IOW TO USE THE CHRONOGRAPH

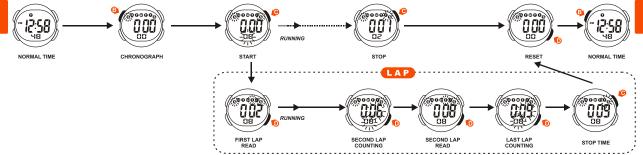

## CARE OF YOUR WATCH

- FEATURES AND SPECIFICATIONS

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2.Do not operate push buttons below the surface of the water when swimming or
- S.Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- 4. Avoid severing impact: The watch is designed to with stand impact under normal use, It is inadvisable to subject it to severe impact of rough usage or drops onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes.
- Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- 7. Keep your watch away from the conditions of strong electric field and static electricity.
- 1. Standard display mode: Hour, Minutes, Seconds, Day of week
- 2. Function:
  - \* Month, Date AM/PM and Electro-Luminescent light.
  - \* Alarm function with buzzer signal output.
  - \* Chronograph function with lap opertaion.
- \* Hourly chime.
- \* 12/24 hour format switch option.
- 3. Accuracy at normal temperature (25°C): ±30 seconds a month.
- 4. Normal operating temperature range:  $10^{\circ}$ C ~  $40^{\circ}$ C.