

## **INSTRUCTION MANUAL - 86216**

## **CARE OF YOUR WATCH**

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- Do not operate push buttons below the surface of the water when swin diving.
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- 4.Avoid severing impact: The watch is designed to with stand impact under norma use, it is inadvisable to subject it to severe impact of rough usage or drops onto hard surfaces.
- 5. Avoid exposing the watch to temperature extremes
- Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
   Keep your watch away from the conditions of strong electric field and static electricity.

## **REGULAR DISPLAY AND BUTTON OPERATION**



BUTTON OPERATION ADJUST C LIGHT (3) MODE

## **FEATURES AND SPECIFICATIONS**

- 1.Standard display mode: Hour, Minutes.

- 1.Standard display mode: Hour, winutes.
  2.Function:

  \*AM/PM 12 hour format.

  \*Electro-Luminescent light.

  \*Accuracy at normal temperature (25°C);±60 seconds a month.

  3.Normal operating temperature range: 10°C ~ 40°C.







