

## **INSTRUCTION MANUAL 86217**


REGULAR DISPLAY AND BUTTON OPERATION



BUTTON OPERATION

A LIGHT © ST/STP

B MODE D ADJ.

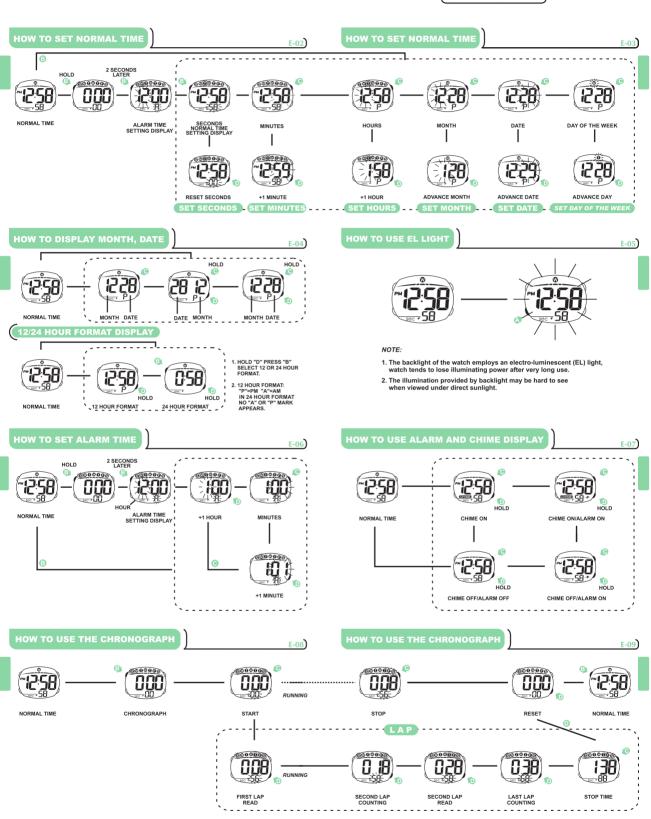

- 1.This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2.Do not operate push buttons below the surface of the water when swimming or diving.
- 3. Should water or condensation appear in the watch, immediately have the watch
- checked. Water can corrode electronic parts inside the case.

  4. Avoid severing impact: The watch is designed to with stand impact under normal use, it is inadvisable to subject it to severe impact of rough usage or drops onto hard surfaces.
- $5. \mbox{\sc Avoid}$  exposing the watch to temperature extremes.

CARE OF YOUR WATCH

- Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- School of the second of the

- FEATURES AND SPECIFICATIONS
- 1. Standard display mode: Hour, Minutes, Seconds, Day of the week
- Standard display mode: Hour, Minutes, Second
   Function:
- \* Month, Date AM/PM and Electro-Luminescent light.
- \* Alarm function with buzzer signal output. \* Chronograph function with lap opertaion.
- \* Hourly chime.
- \* 12/24 hour format switch option.
- 3. Accuracy at normal temperature (25°C): ±30 seconds a month.
- 4. Normal operating temperature range:  $10^{\circ}$ C ~  $40^{\circ}$ C.