


## INSTRUCTION MANUAL 86229

### ALARM CHRONOGRAPH MODULE




### HOW TO USE ELECTRO - LUMINESCENT

PRESS BUTTON S4 TO USE  
ELECTRO - LUMINESCENT FUNCTION

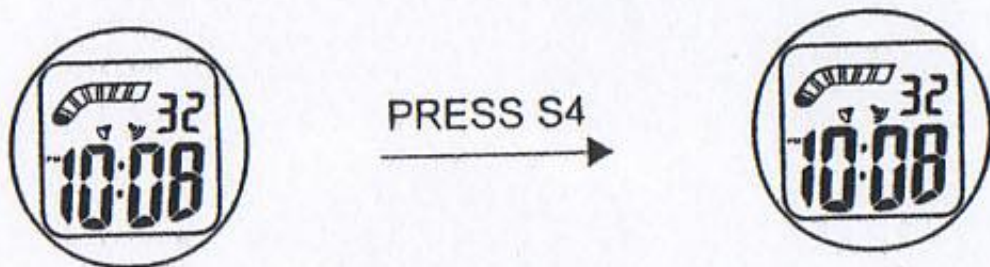


"NORMAL TIME DISPLAY"

### HOW TO SET 12/24 HOUR FORMAT

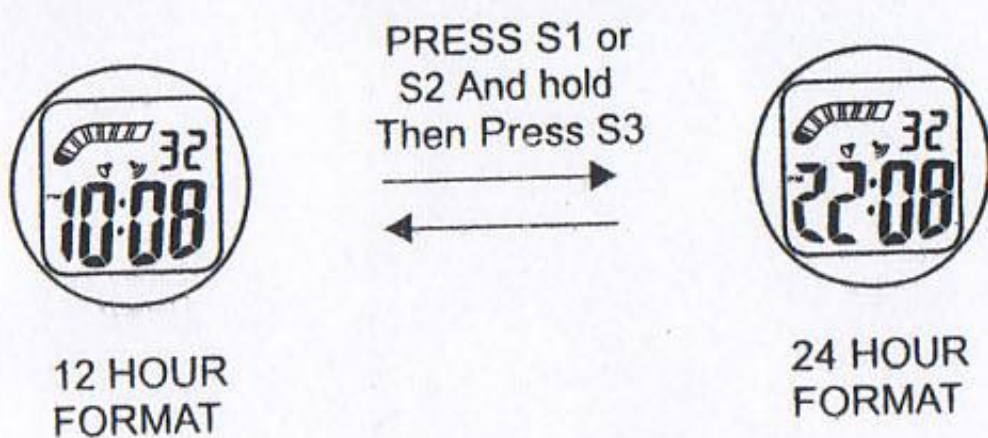


### HOW TO DISPLAY MONTH/DATE

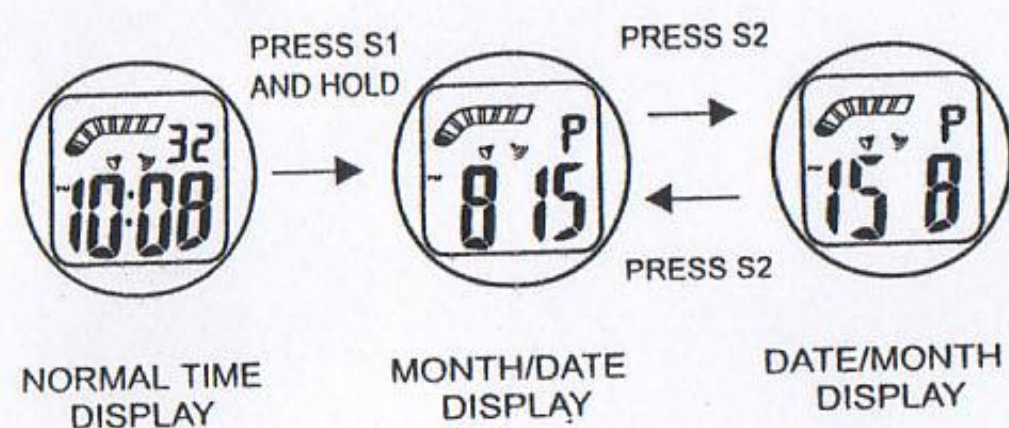

### CARE OF YOUR WATCH

1. This watch contains electronic components. Never attempt to open the case or remove the back cover.
2. Do not operate push buttons below the surface of the water while swimming or diving.
3. Should water or condensation appear in the watch, have the watch checked immediately. Corrosion of electronic parts can occur inside the case.
4. Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
5. Avoid exposing the watch to extreme temperature.
6. Clean the watch with soft cloth and clean water only. Avoid using chemicals.
7. Keep your watch away from the conditions of strong electric field and static electricity.


### REGULAR DISPLAY AND BUTTON OPERATION

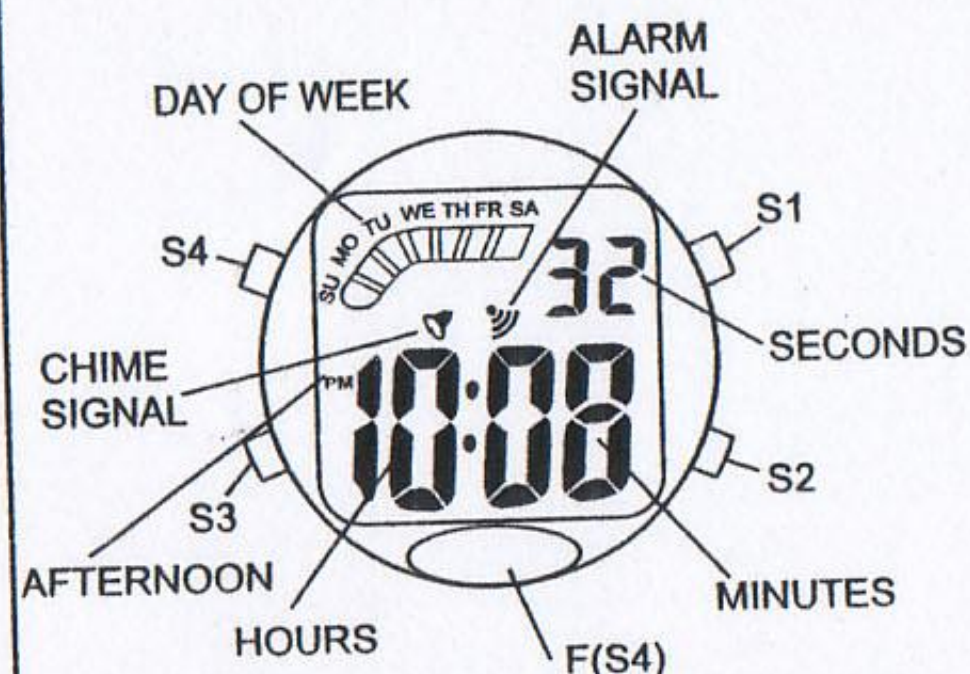


(Battery: CR2016 or CR2032)

- ▶ PRESS "BUTTON S2" AND HOLD IT. TO SHOW THE ALARM TIME. RELEASE TO RETURN TO NORMAL TIME DISPLAY.
- ▶ PRESS "BUTTON S1" AND HOLD IT. TO SHOW THE MONTH/DATE OR "DATE/MONTH", RELEASE TO RETURN TO NORMAL TIME DISPLAY.


### ALARM AND CHIME DISPLAY

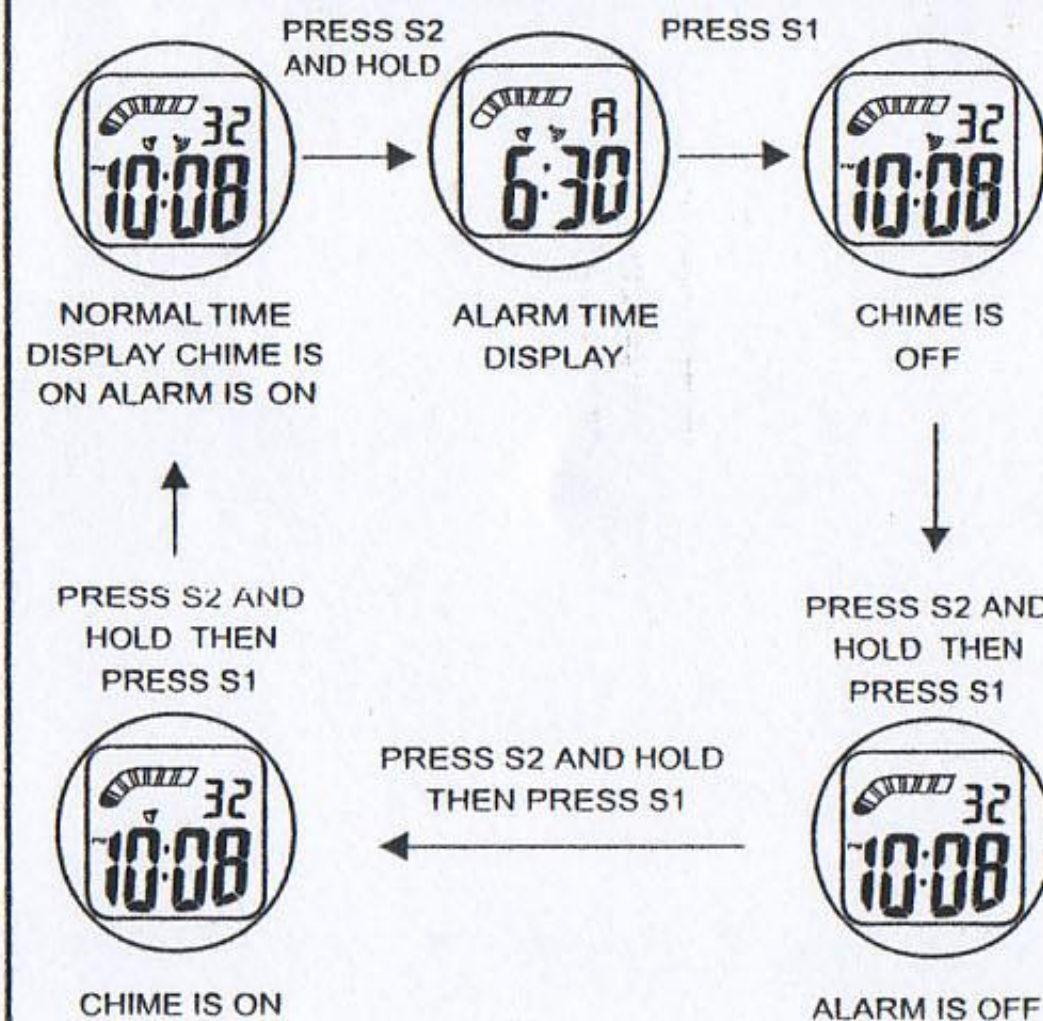

### HOW TO SET THE ALARM TIME

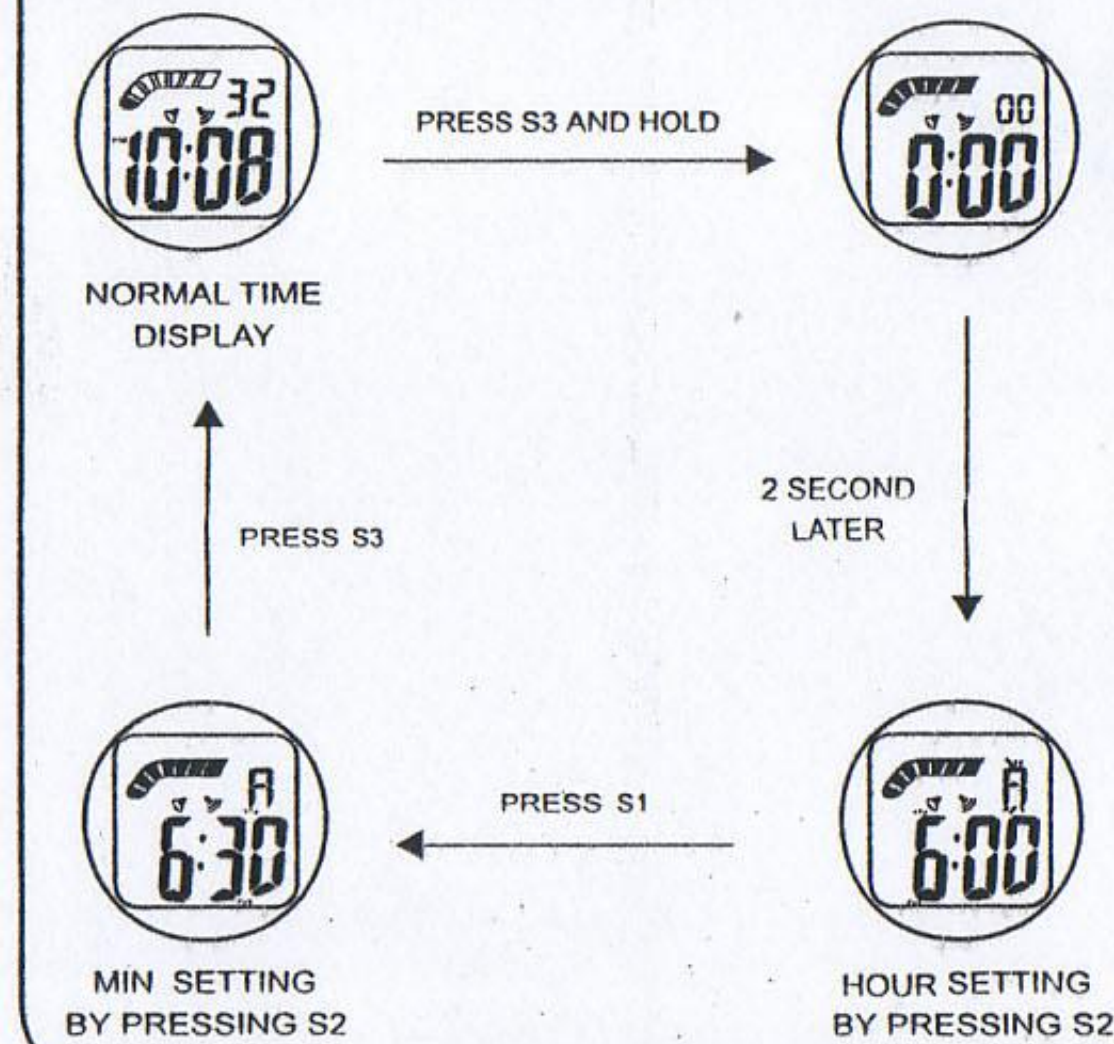

### HOW TO OPERATE STOP WATCH

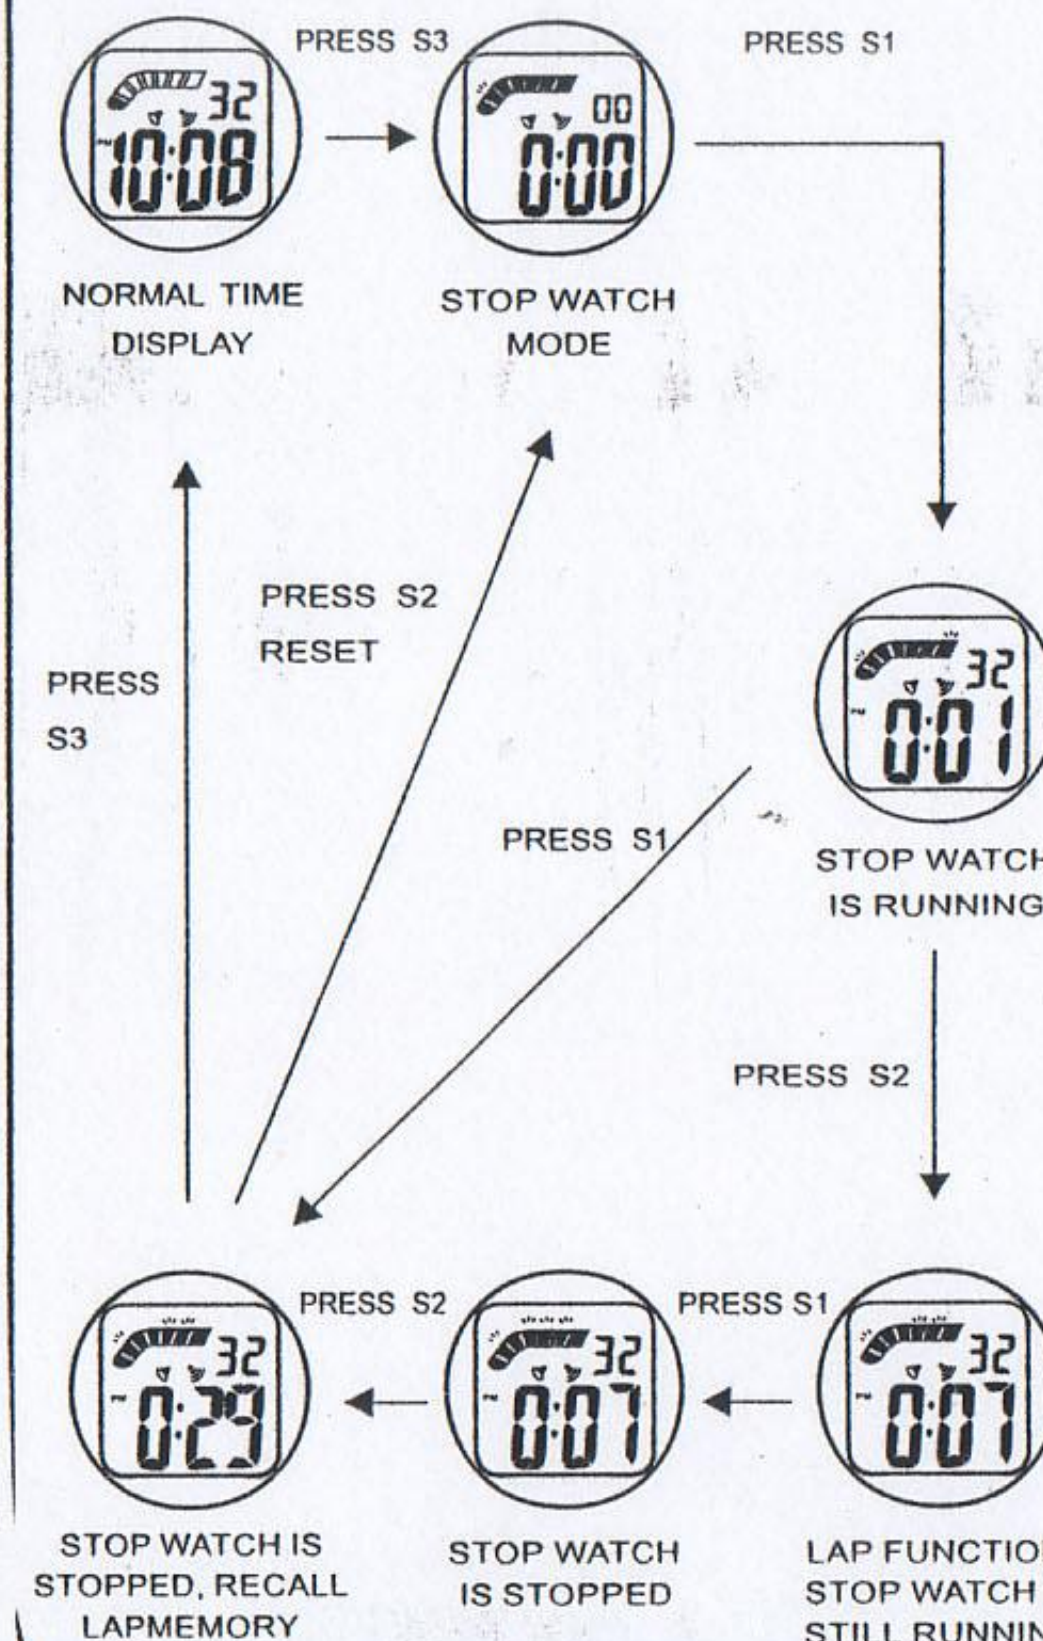

### HOW TO SET NORMAL TIME

