


INSTRUCTION MANUAL 86254








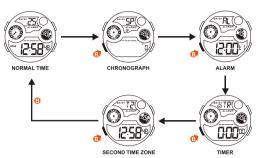





HOW TO CHANGE THE DISPLAY MODE

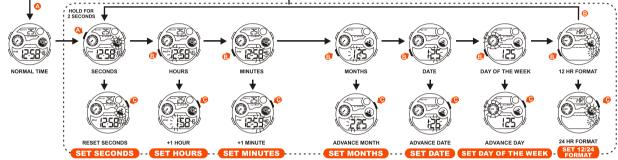

HOW TO SET ALARM TIME


E-02)

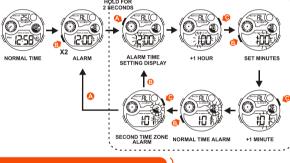

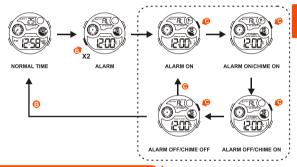

HOW TO USE THE CHRONOGRAPH


HOW TO USE THE CHRONOGRAPH

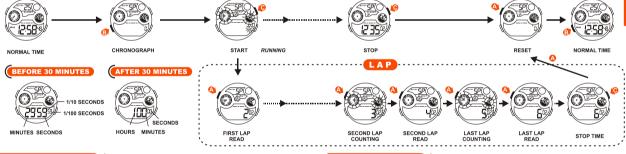









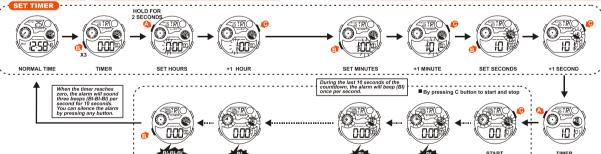

HOW TO SET SECOND TIME ZONE

 HOW TO USE EL LIGHT

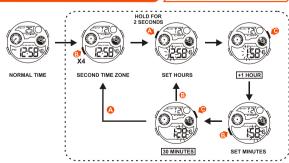



NOTE:

- 1. This watch features an electro-luminescent (EL) backlight, which tends to lose illuminating power after very long use.
- The illumination provided by backlight may hard to see under direct sunlight.

CARE OF YOUR WATCH

- This watch contains precise electronic components. Never attempt to open the case or remove the back cover.
- 2. Do not operate buttons while underwater, or while swimming or diving.

7. Keep your watch away from strong electric fields and static electricity.

- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- 4. Avoid severe impact: The watch is designed to withstand impact under normal use. Do not subject it to severe impacts or rough usage, and do not drop it onto
- 5. Avoid exposing the watch to temperature extremes.
- 6. Clean the watch with a soft cloth and clean water only. Avoid using chemicals, especially soap.
- Timer
- * Second time zone. 3. Accuracy at normal temperature (25°C): ±30 seconds a month.
- 4. Normal operating temperature range: 10°C ~ 40°C.

FEATURES AND SPECIFICATIONS

<u>E-15</u>)

- 1. Standard display mode: Hour, Minutes, Seconds, Month, Day of the week.
- 2. Function:
 - * Month, Date AM/PM and Electro-Luminescent light. * Alarm function with buzzer signal output.
 - * Chronograph function with lap opertaion.
 - * Hourly chime. * 12/24 hour format switch option.