



NOWLEY


Instruction Manual

86323

Features

- 13 digits display: Hour, Minute Second, Month, date, Day of week
- Auto calendar from 2015 to 2016
- Chronograph with 1/100 second
- daily alarm and hourly chime
- Dual time zone
- Count down timer with maximum of 23 hours 59mins and 59secs
- 12/24 hour format
- animation dots second display
- EL back


Mode Transition Diagram

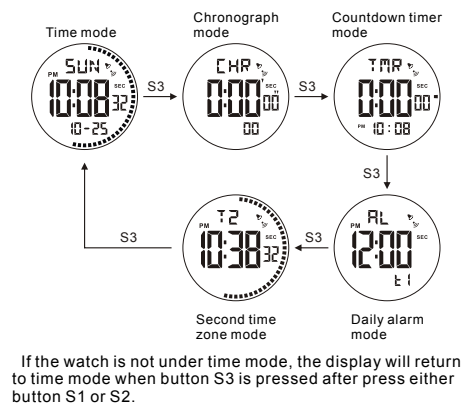

CARE OF YOUR WATCH


- This watch contains electronic components. Never attempt to open the case or remove the back cover.
- Do not operate push buttons below the surface of the water while swimming or diving.
- Should water or condensation appear in the watch, have the watch checked immediately. Corrosion of electronic parts can occur inside the case.
- Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
- Avoid exposing the watch to extreme temperature.
- Clean the watch with soft cloth and clean water only. Avoid using chemicals.
- Keep your watch away from the conditions of strong electric field and static electricity.

Lcd Display And Buttons Function

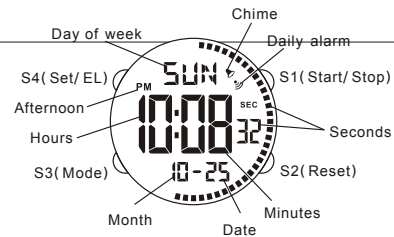


Time Mode



1. How to set year

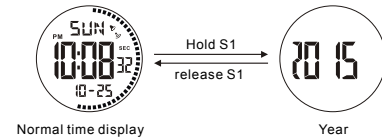

2. How to set hourly chime

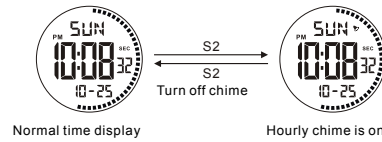


3. How to set the time and calendar

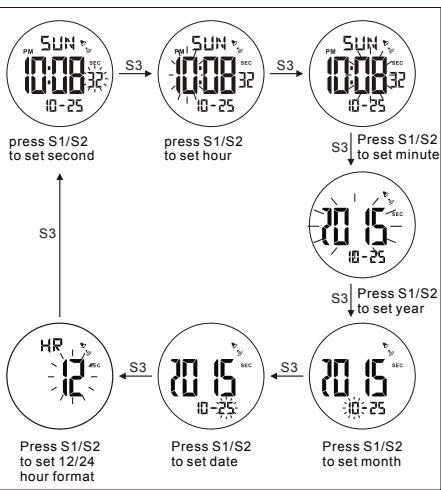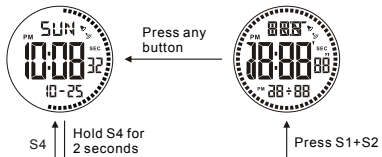

Press S4 to exist the time setting mode


Chronograph Mode

How to Use chronograph

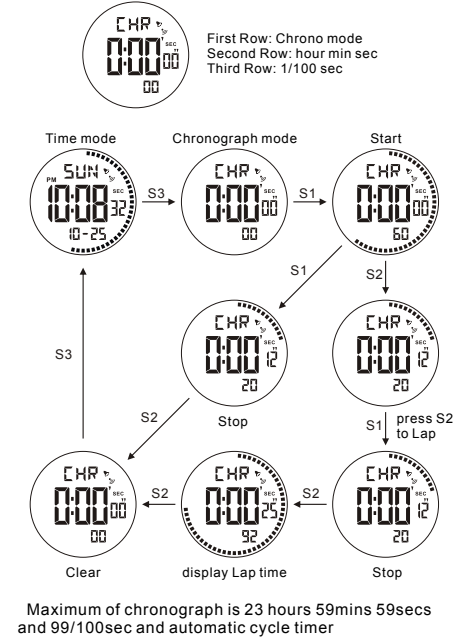


Daily Alarm Mode

How to set daily alarm

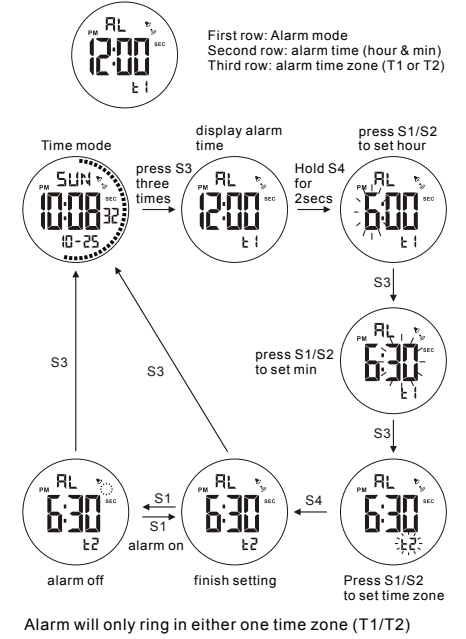

Countdown Timer Mode

How to use countdown timer

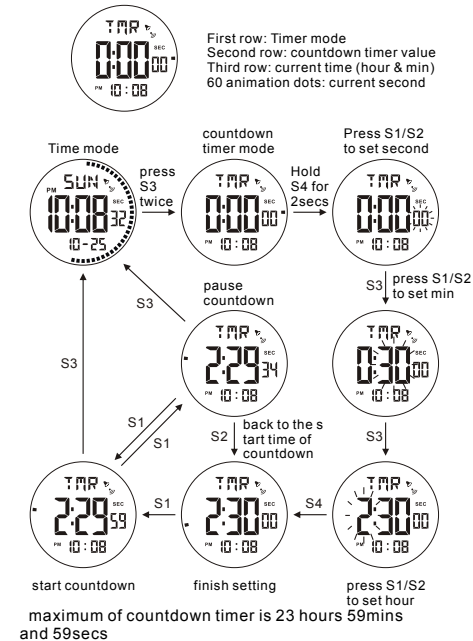

Second Time Zone Mode

How to set the second time zone

