NOWLEY

INSTRUCTION MANUAL
85268

LIGHT(A Key) ————   ———— (D Key) START

MODE（B Key)————   ———— (C Key)RESET
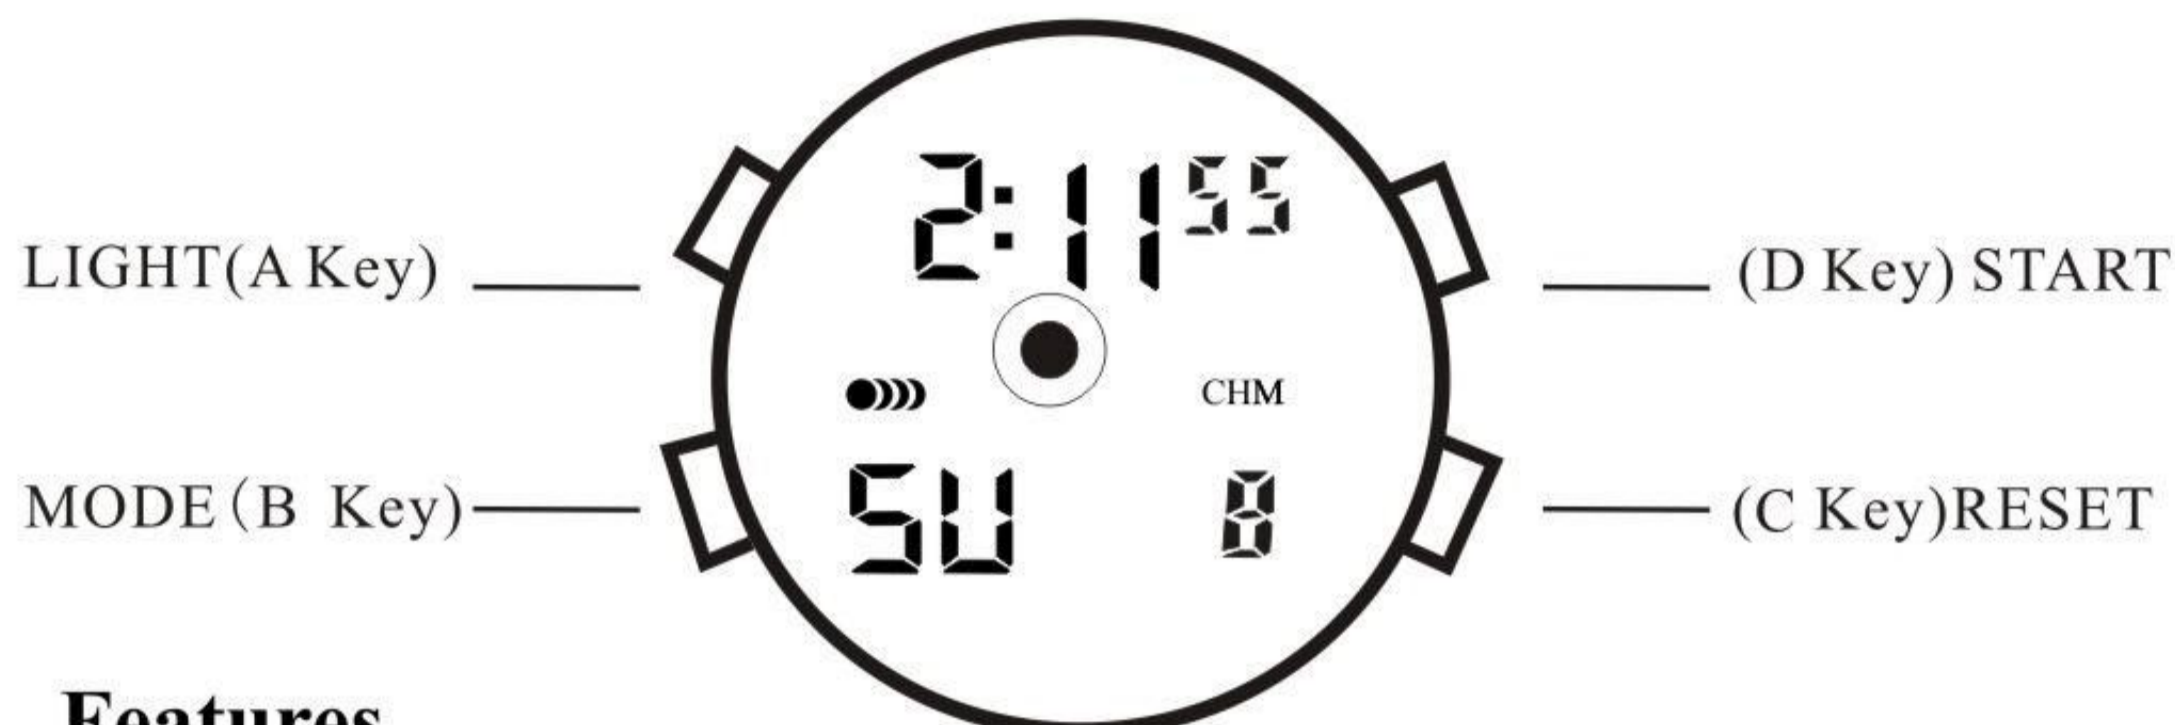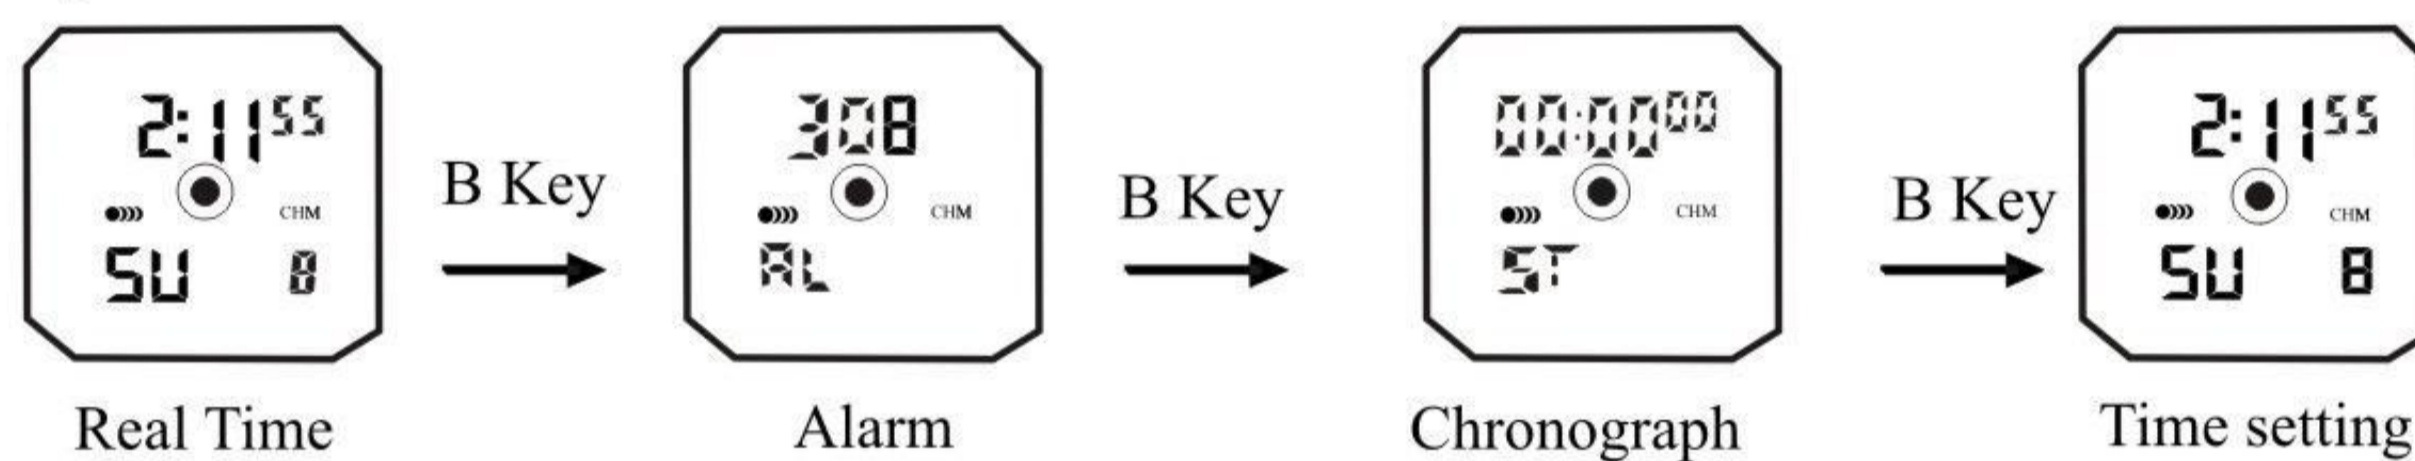
A . Features

➢ 10 Digits LCD Display，Display Hour ,Minute ,Second ,Month ,Day and Week
➢ Daily Alarm and Chime hourly
➢ 12 / 24H format selectable
➢ 1/100 second Chronograph with split functions
➢ EL backlight

B . Operational Manual

Real Time   → B Key →   Alarm   → B Key →   Chronograph   → B Key →   Time setting

1. At any state ,press A key EL backlight for 3s .

2. Real Time

➢ In Time Mode , press D key to toggle between .12HR and 24HR display format.

3. Daily Alarm

➢ Turn On / Off Alarm and Chime
    Press D key to turn on/off Alarm (" ●))) ") or Chime (" CHM ")
➢ The alarm tone sounds at the preset time for about 20 seconds .Pressing any button stops the alarm tone operation .
➢ Alarm setting : Press C key to select "Hour " or "Minute "setting, Press D key to adjust the flashing item, Press C key to confirm, Press B key to return to Real Time mode.

4. Chronograph

➢ The display range of the Chronograph is 23hour,59 minutes,59.99seconds
➢ Press D key to Start/Stop running ;
➢ When stop ,press C key to zero .
➢ When running ,press C key to split count.
➢ Then press D key to exit split count ,and stop counting ; press C key to display all counts ,press C key again to zero ;
➢ When running ,press B key to return to Real Time Mode ,and it running at back .

5. Time Setting

➢ "Second " flashing when loading ,press D key to zero ; Press C key to select item as following sequence :
   Hour → Minute → Month → Day → Day of Week → Second
➢ Press D key to adjust the flashing item.

➢ Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes . In the range of 00 to 29,the minutes are unchanged.

HOW TO SET TIME FOR 3 HANDS MODEL
If there is a plastic piece under the crown, gently remove it, press the crown down to normal position.
Refer to the diagram below, gently pull the crown out to the first click position, The second hand will stop when the crown is in the first click position. When in the first click position, turning the crown will change the minute and hour hands. Set the correct time, then gently push the crown back to normal position, and the second hand will begin moving again indicating normal operation.

a. NORMAL Position
b. FIRST Click
CROWN