




21-2303

Downloading the App


Scan the following QR code, download and install the App.

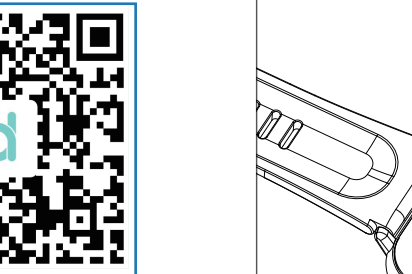

Scan QR Code and Download

Charging and Active

Charging the device to active before the first time using;
To charge your device, plug the charging cable into the
adapter or USB port on your computer.

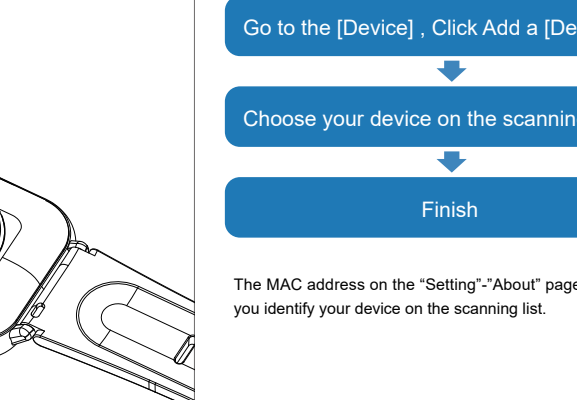

Pairing

Open the App and set up your profile

Go to the [Device] , Click Add a [Device]

Choose your device on the scanning list

Finish

The MAC address on the "Setting"- "About" page could help
you identify your device on the scanning list.

Use the Touch Screen



Control Center

Swipe Down

Swipe Up



Swipe Left

Swipe Right



Menu

Swipe Down

Swipe Up




Feature pages




Messages

Smart Watch Features




After connecting the smart Watch to
the phone, you can use the watch to dial
and answer the phone calls. You can also
view the call history of the watch. You need to
keep the connection between the watch and the
phone stable when using the Phone Call
function.



AI Voice


In the state of Bluetooth connection, the
watch can wake up the voice assistant
on the phone.

Smart Watch Features



Sleep

If you keep wearing Smart Watch in
your sleep, it can provide the hours
slept and quality of sleep stats on
both the screen and the APP.
NOTE: Sleep stats reset to zero at
8:00 pm.



Heart Rate Test

The Smart Watch could record your
heart rate all day.
You also could tap on the page to
start measuring heart rate.

Smart Watch Features



Sports


Smart Watch automatically tracks
Steps taken on the screen.
NOTE: Your movement stats reset
to zero at midnight.



Training


Tap the training icon on the menu
to start a new training measure
recording, there are 123 sport
modes to be chosen.
The last training recording will be
shown on the training page.

Smart Watch Features



Blood Pressure Test

Tap on the blood pressure page
to start measuring your blood
pressure.
On the blood pressure page, it can
show the blood pressure measured
data of the last times.



SpO2 Test

Tap the SpO2 page to start
measuring your SpO2.
On the SpO2 page, it can show the
SpO2 measured data of the last
times.

Smart Watch Features



Weather

It could show the weather info of
current and tomorrow on the
weather page.
Weather info is synced after con-
necting with the APP, it will not be
updated after a long disconnected.



Messages Reminder

The device can sync incoming noti-
fications from Twitter, Facebook,
Whatsapp, Instagram etc.
Recently 5 messages can be stored.
Note: You can switch on/off the
incoming notification in the APP.

Smart Watch Features



Remote Shutter


After connecting the device, you
can remote control the camera on
your phone.



Player Shutter

After connecting the device, you
can remote control the music player
on your phone.

Smart Watch Features



Other Features

Other features include stopwatch,
alarm, timer, brightness, mute on/off,
theater mode, factory reset, power off
and about.



Silent Alarms

Set up the alarm on the APP, the
device will vibrate to remind on
time.

Smart Watch Features



Remind to Move


The device will vibrate to remind
you to make a relax after 1 hour
sitting.
Note: You can switch on/off the
feature in the APP.



Remind to Drink


The smart watch will remind you
"Time to Drink Some Water" at the
planned drinking time.
Note: You can set the feature in
the APP.

General Information



Quick View

With Quick View you can check the time or the message from
your phone on your Smart Bracelet without tapping. Just turn
your wrist towards you and the time screen will appear for a
few seconds.



Recycling

Please kindly be aware that it is the consumer's responsibility
to properly dispose and recycle Smart Bracelet and accompanying
components. Taking into account that the smartwatch is
considered electronic waste.


Precautions



The following conditions are not covered by the warranty.

A. Accident or harm
B. Testing, repairing or disassembling without authorization
C. Contamination due to human reasons
D. Damage caused by connection with a non compatible
equipment
E. Natural aging
F. Damage caused by Force majeure
G. Shock or impact

Precautions



Please avoid strong magnetic field, direct light or high
temperature environment.

This product is not intended for disease diagnosis,
treatment or prevention. Only a qualified doctor can
diagnose and treat any health disease.

It could happen that the data given by the smartwatch
is not accurate, due to external factors, such as the
physical condition or weather conditions.

Please avoid wearing the watch strap too tightly, and keep
the contact area between the watch and your skin clean.

Children should use this product under the guidance of their
parents to avoid harm.

The waterproof rating of this product is IP67, so avoid being
immersed in water neither put it under the water.