



**NOWLEY**

*TIME FOR CHANGE*



**SMARTWATCH NOWLEY**

**21-2022**


## Compatible system and requirement

Android 4.4 or above    IOS above 8.5    iPhone5s    Bluetooth 4.0

## Preparation

Please ensure that the battery is fully charged for the first time. If the battery is too low, please charge it for 2-2.5 hours. (Be sure to charge the battery for the first time.

Under the shutdown state, the bracelet will display the charging icon. Under the boot condition, the battery bar on the main interface of the wristband will be in a flowing state.

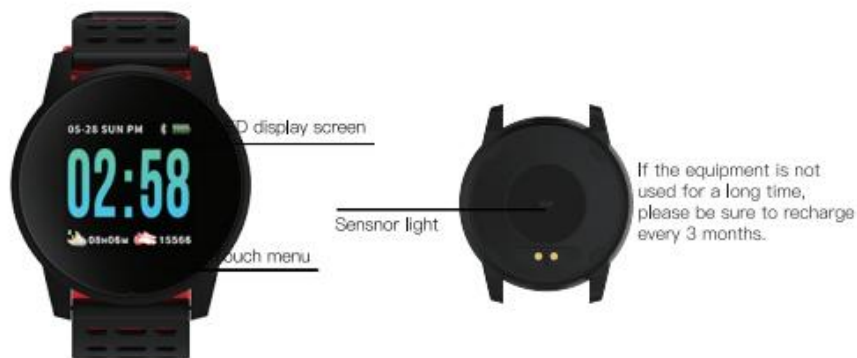

## Connection Instruction---- Mobile APP download Method



1: Scan the right QR code to download

2: Please download the "WearFit" in the Play store (Android), or on the Apple Store (IOS).

## The bracelet function specification

**Time mode:** Battery indicator, Date, Sleep time, Step count.(The time of the bracelet after connected the app will automatically synchronize with the time of the phone, and the time cannot be set on the wristband) Long press the double dial to switch.

**Sports information:** Automatically record daily steps, calories, kilometers.

**Heart rate measurement:** The whole point automatically measures the current

heart rate, and can also be manually measured by the APP. The wristband switches to the heart rate measurement Interface and presses long to enter the measurement. The measurement is automatically returned to the corresponding interface.

**Blood pressure measurement:** The current point automatically measures the current blood pressure, and can also be manually measured by the APP. The wristband switches to the blood pressure measurement Interface and presses long to enter the measurement. The measurement is automatically returned to the corresponding interface.

**Blood oxygen measurement:** The whole point automatically measures the current blood oxygen measurement condition, and can also be manually measured by the APP. The wristband switches to the blood oxygen measurement Interface and presses long to enter the measurement. The measurement is automatically returned to the corresponding interface.

**Sleep monitoring:** Automatically monitoring daily sleep quality

**Exercise mode:** Long press in the exercise mode interface, there are three modes of running climbing, riding, long press on each mode interface to start recording the movement time and calories generated, touch pause, long press to exit.

**Smart reminder:** Open the reminder on the App. When there are App, call, SMS, and other information on the phone, there is the corresponding reminder on the bracelet.

**More:** Stopwatch (long press to enter, exit , tap start , pause), find the phone (long press search, tap pause) , shut down (long pause), Stopwatch (long press to enter, exit, tap, start, pause), find the phone (long press search, tap pause). Power off (long press to turn off), reset function (long press to return to time interface), QR code (scan QR code into the app download address) .

**Other functions:** raise your hand to brighten, sedentary reminder , do not disturb mode, shake a photo, point measurement, Wechat sports, apple health, automatic language matching.

## Q&A

Can't search for a bracelet or connect when binding?

### **Android system:**

1 .Please confirm that the mobile phone Bluetooth is turned on, and the Bluetooth logo is not displayed on the wristband (if the Bluetooth ring is displayed on the wristband, It Indicates that It has been connected). Close to the bracelet, try searching and connecting again, and make sure the phone system is Android4.4 or higher.

2. If you still can't connect, go to Phone Settings→ Application Managements Authorization Management→App Rights Management, find the application [WearFit], and mark all the permission as "Allow" then enter the phone settings→GPS positioning to open the GPS location function of the phone, restart your phone and try to connect.

### **IOS system:**

1. Please confirm that the mobile phone Bluetooth is turn on, and the Bluetooth logo is not display on the wristband(if the Bluetooth logo is display on the wristband , it indicated that it has been connected by other devices, please release the Bluetooth beforehand ). After the Apple mobile phone is connected once, if you turn on the mobile phone Bluetooth again, the Bluetooth device will be connected by default, so you can go to the phone setting →Bluetooth →ignore this device , the APP can detect the bracelet.

2. After the bracelet is bound, the display is not connected, or the connection is display but the power is 0%/? At this point, the phone is not successfully bound to the bracelet. Please re-bind.

3. App no data display? In the main interface, pull down and refresh the data

manually to display the data in the APP. Automatically synchronization of data for each hour. In addition, the whole point measurement should be turned on. Our column diagram of step counting, heart rate and fatigue all read the whole point data. If it is not open, the histogram has no data. After the App pull down is **refreshed , the data does not load?**

4. App setting → Restore Bracelet Factory Setting → Click to restore factory settings→Button Shutdown →Reboot the Bracelet to connect to the App. Normally use the bracelet and the data can be loaded.

### Basic parameters

Semen size	1,3 Inche
Bluetooth	Bluetooth 4.0
Waterproof rating	IP67 waterproof rating
Battery Type	Polymer Battery
Battery capacity	180mAh -
Charging time	2-3 Hours
Wrist strap size	249 mm x 22 mm x 2.9 mm
Loading method	Contact charging
Packing	Smart Bracelet + Charging Clip + Manual

### Remark

- . If there is any problem with the quality of the product or the use of the product please, contacts the store directly, we will deal with It quickly.
  - . The measurement results of this product are for reference only and are not intended for any medical use or basis. Please follow the doctors instructions and must not self -diagnose and treat according to the measurement results.
3. The product waterproof rating is IP67, can be used for waterproofing, not for diving and for  
A long time in the water. In addition, this product does not prevent hot water, because water vapor will affect the ring.
- . The company reserves the right to modify the contents of this manual without prior notice. Some functions are different in the corresponding software version, which is normal.

- . This product contains a polymer battery. Do not leave this product In a high temperature environment for a long time. Do not place this product in an open flame.